





Recomndation :-


- 1) Each Standation Profile upto 2400mm Single Piece Shoud be with two Suspension.
- 2) Joining of Profile upto 2400mm and less should have suspender at the ends and suspeners at the either side of the Joint.

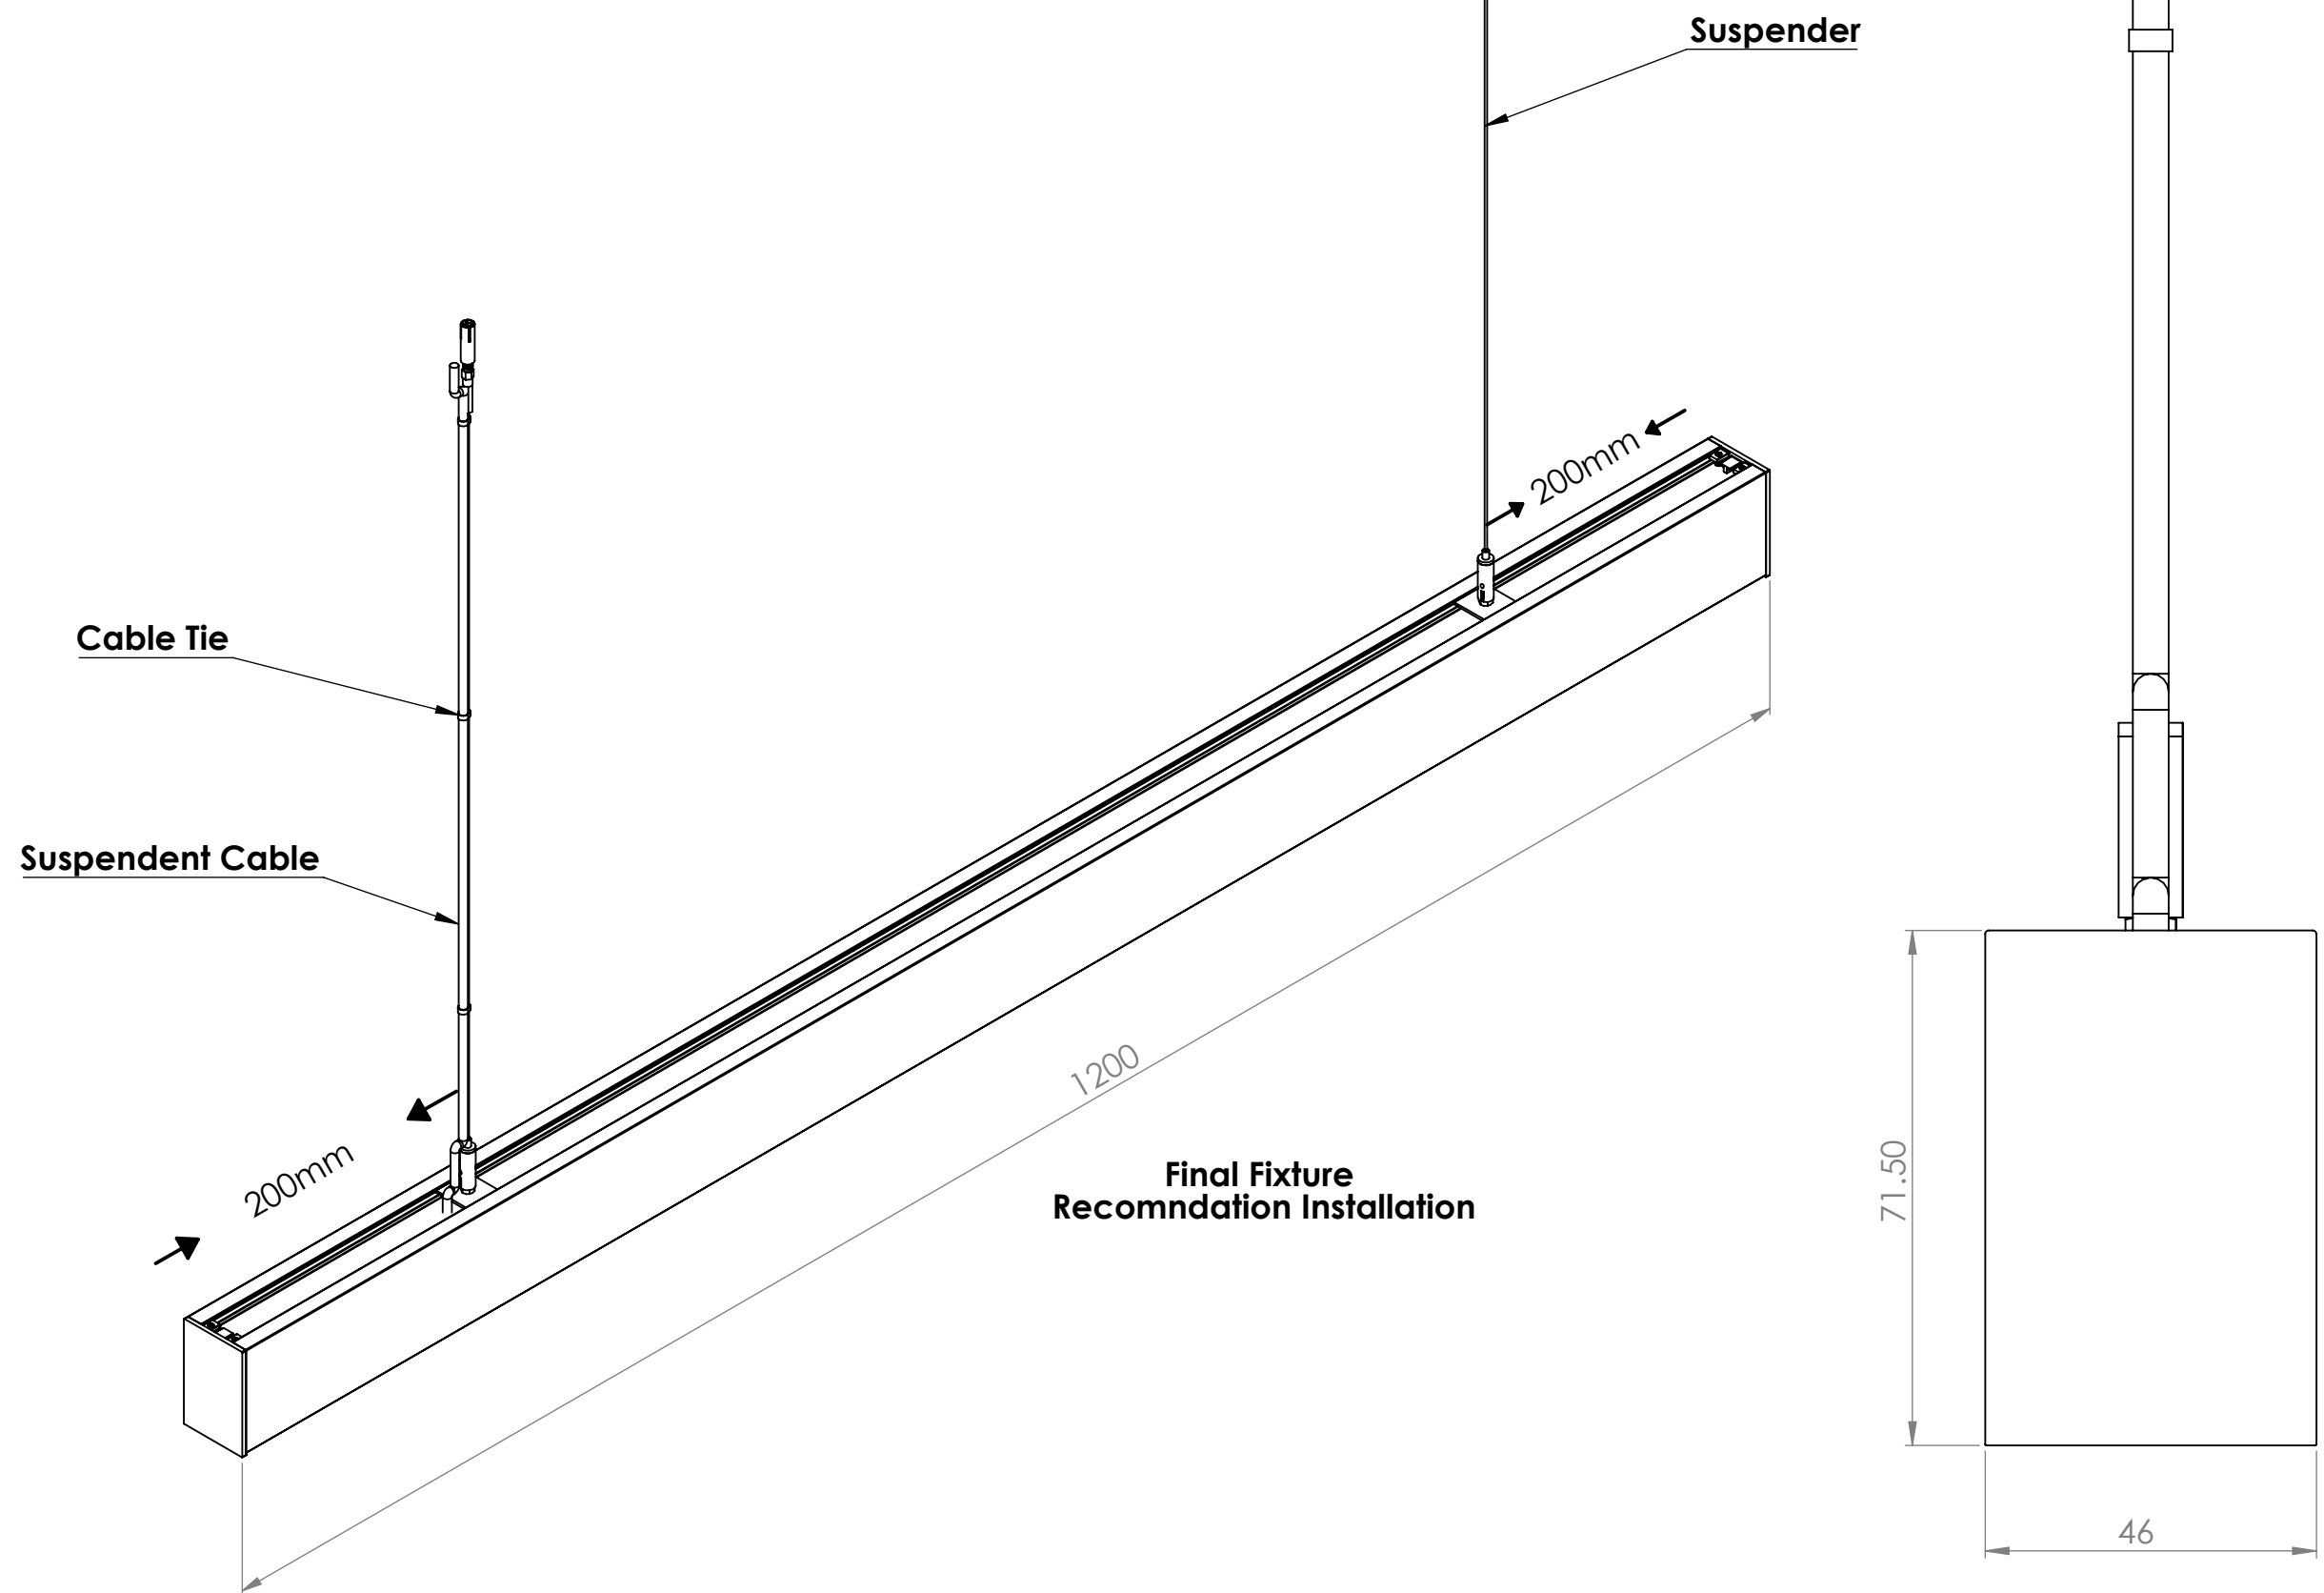

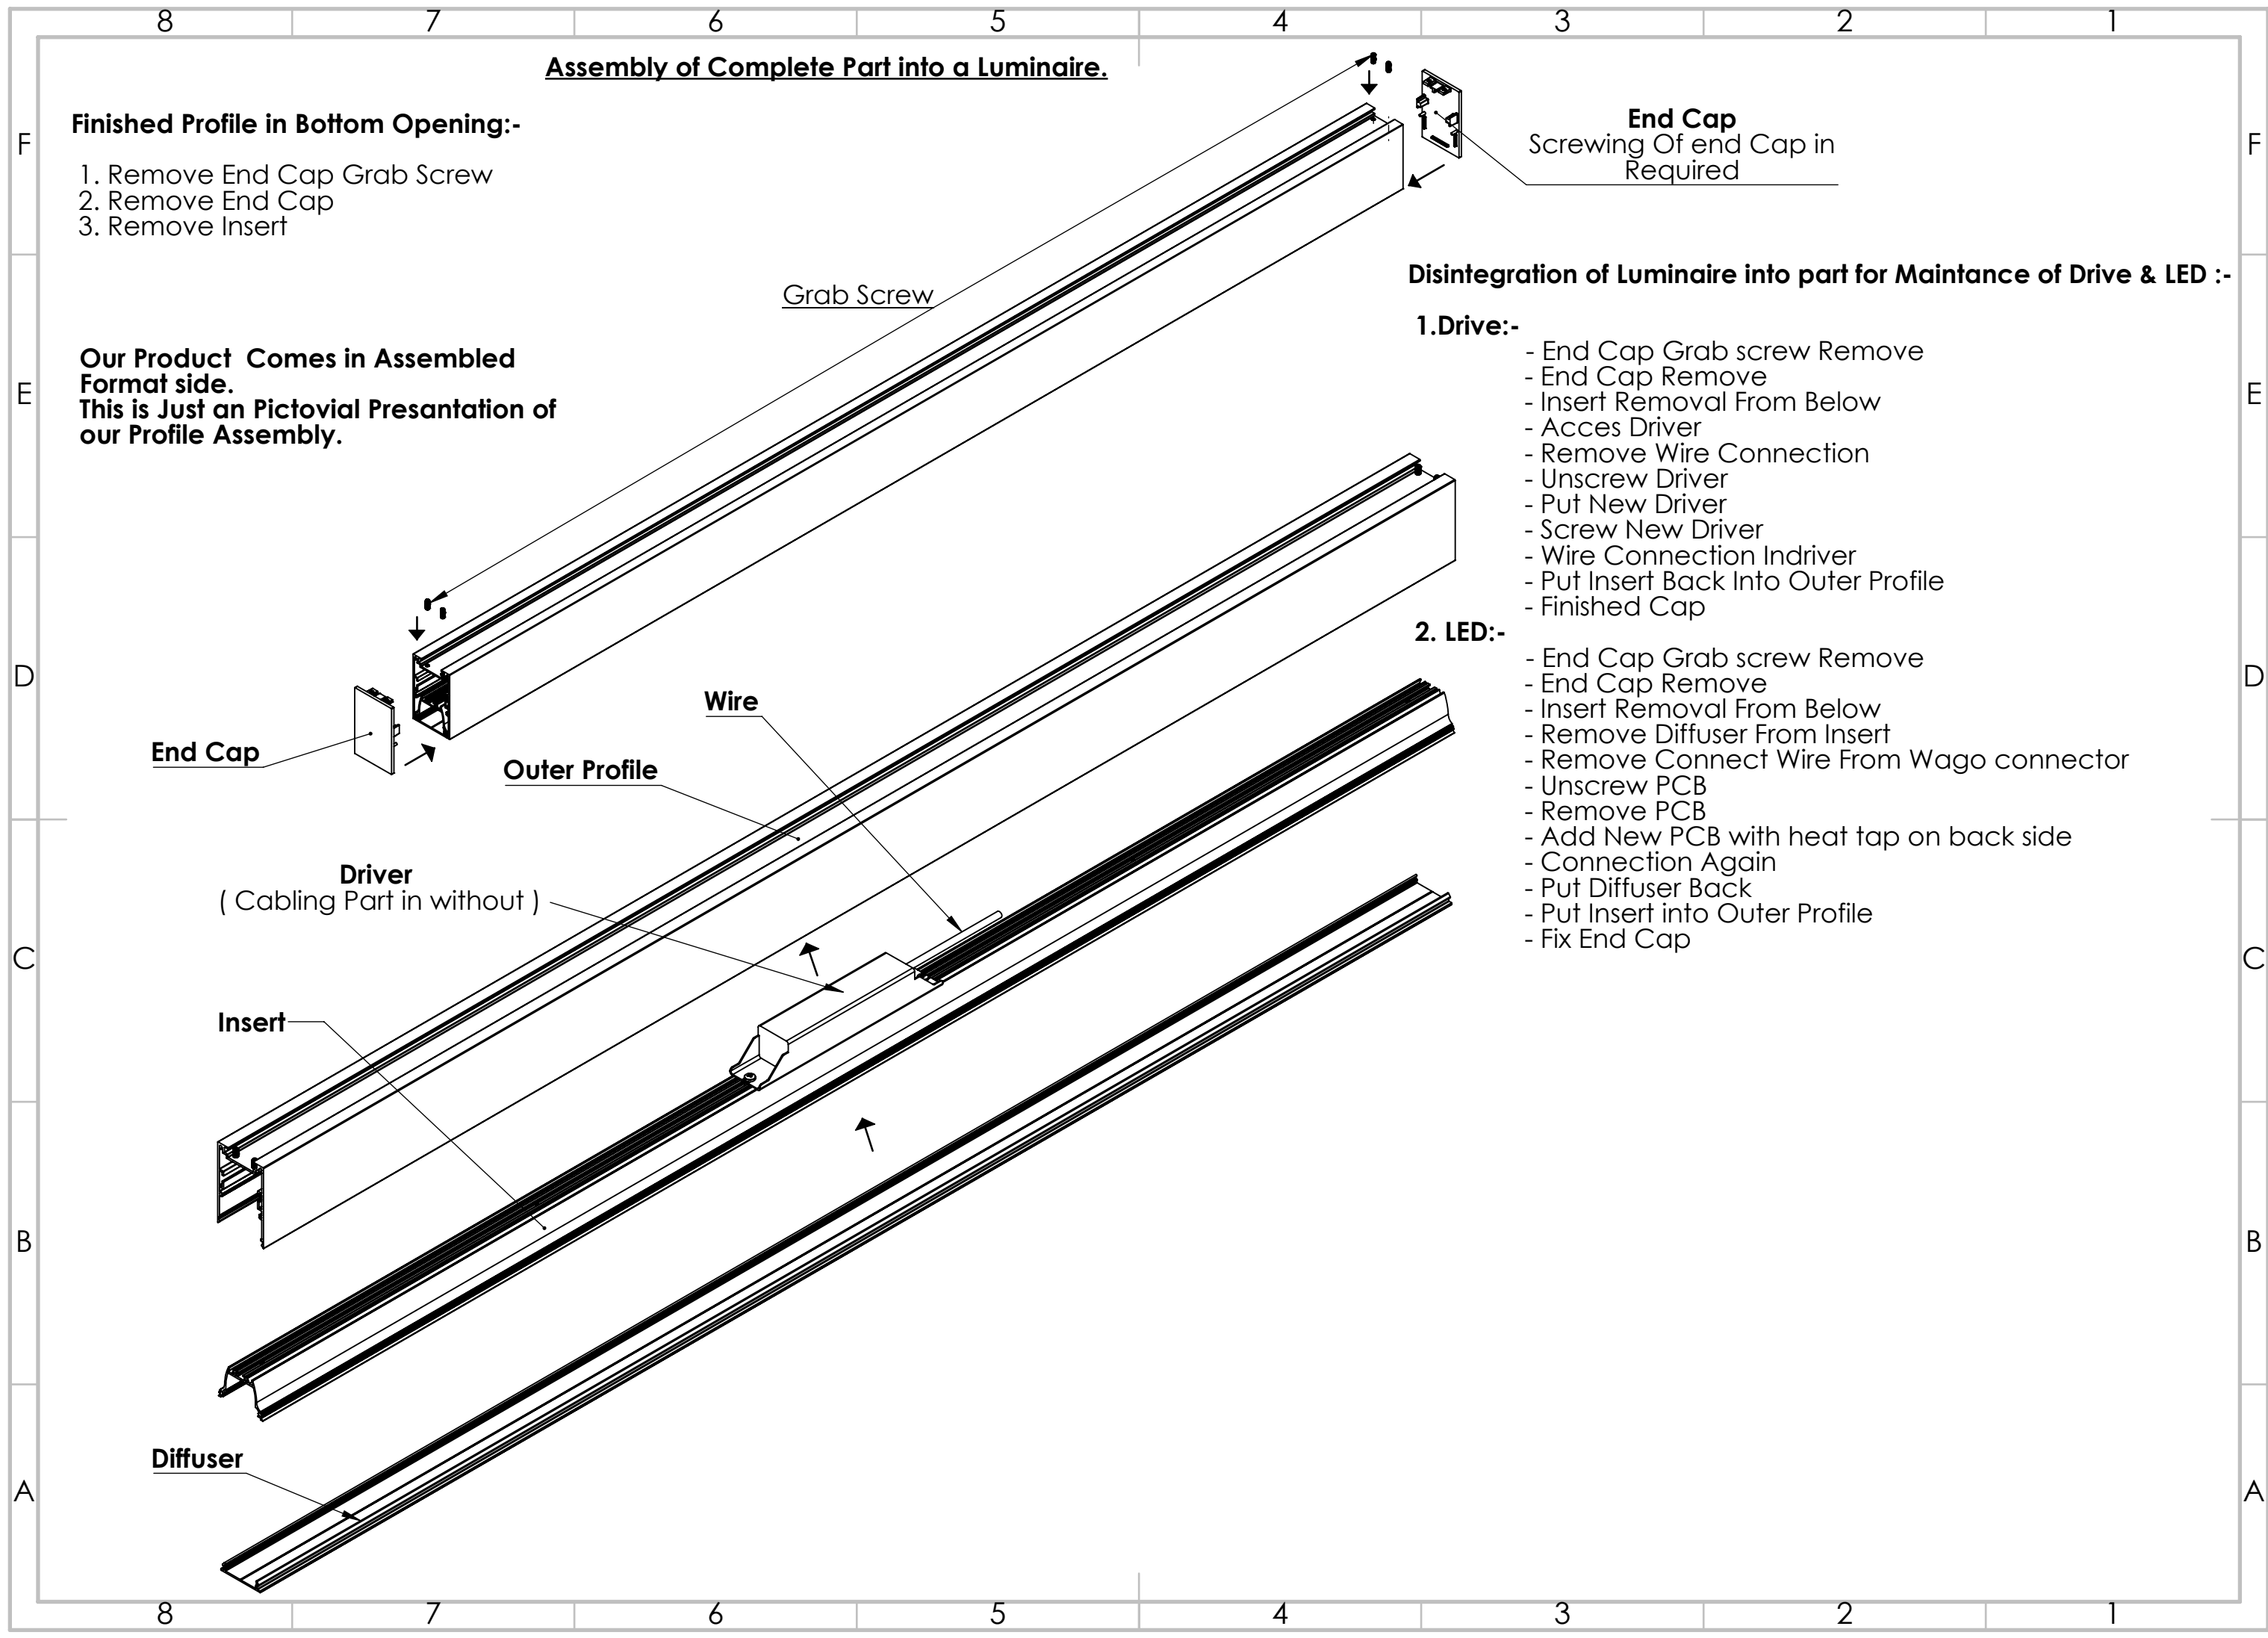

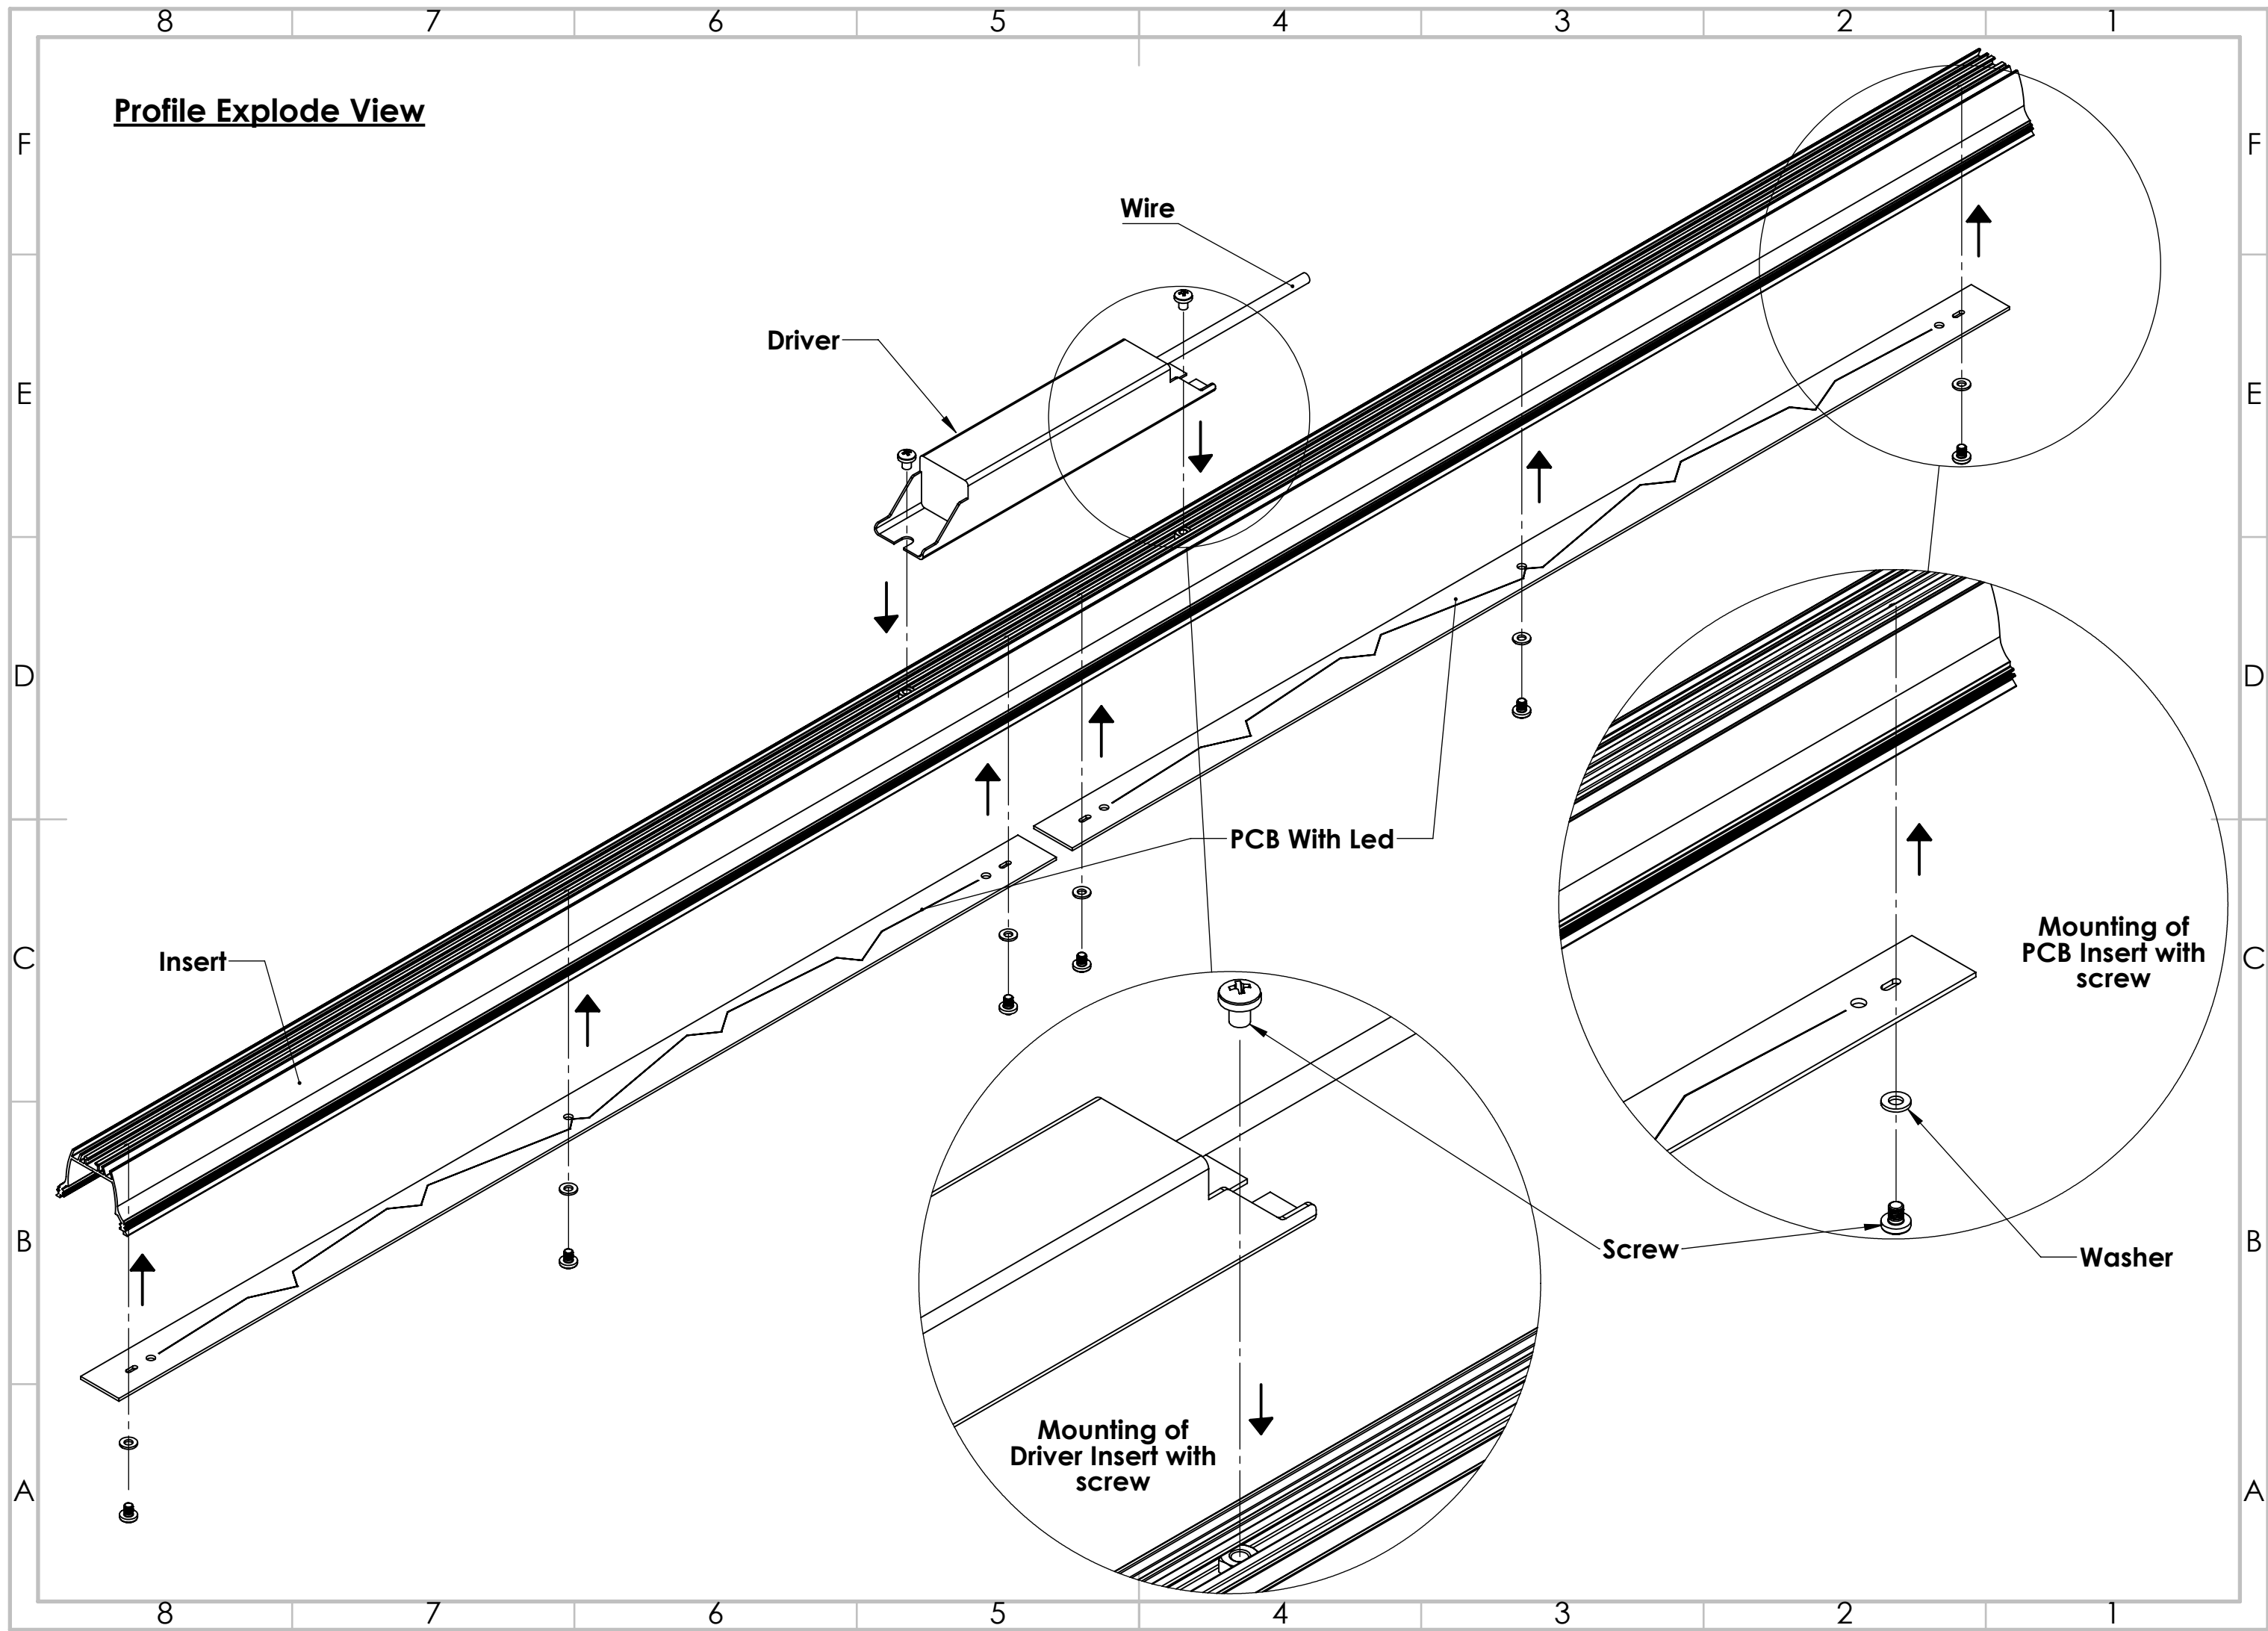

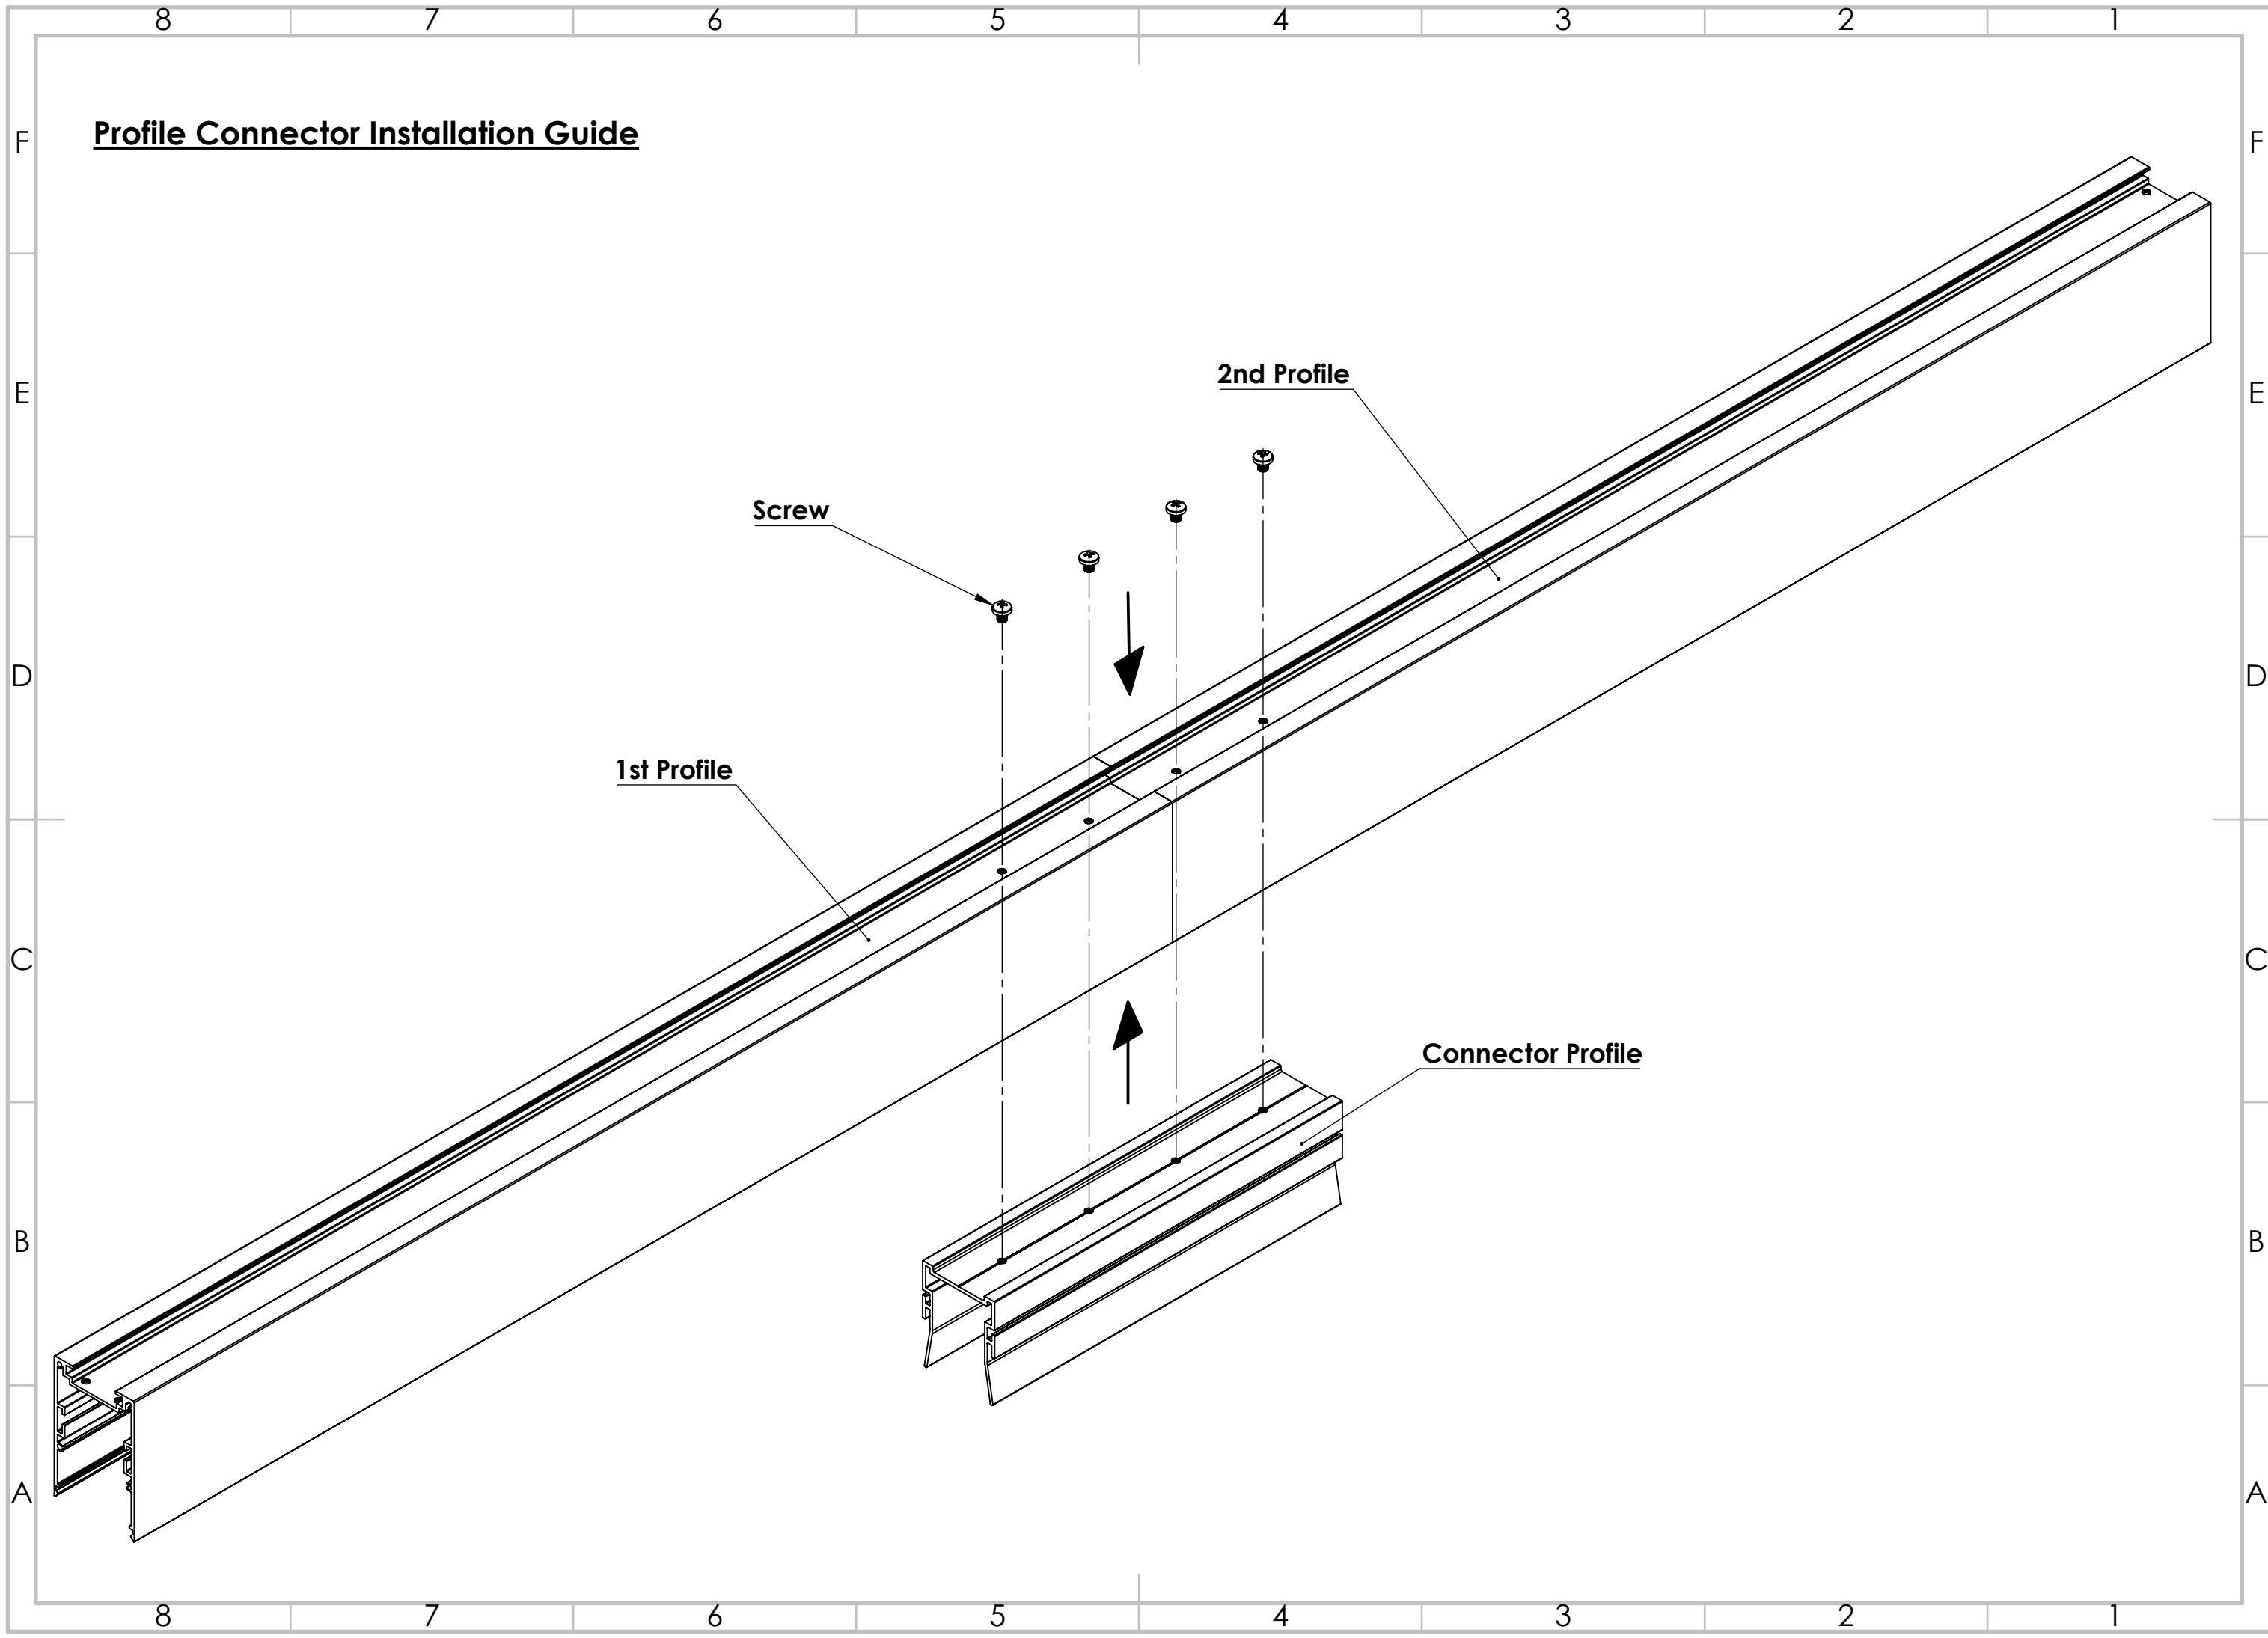

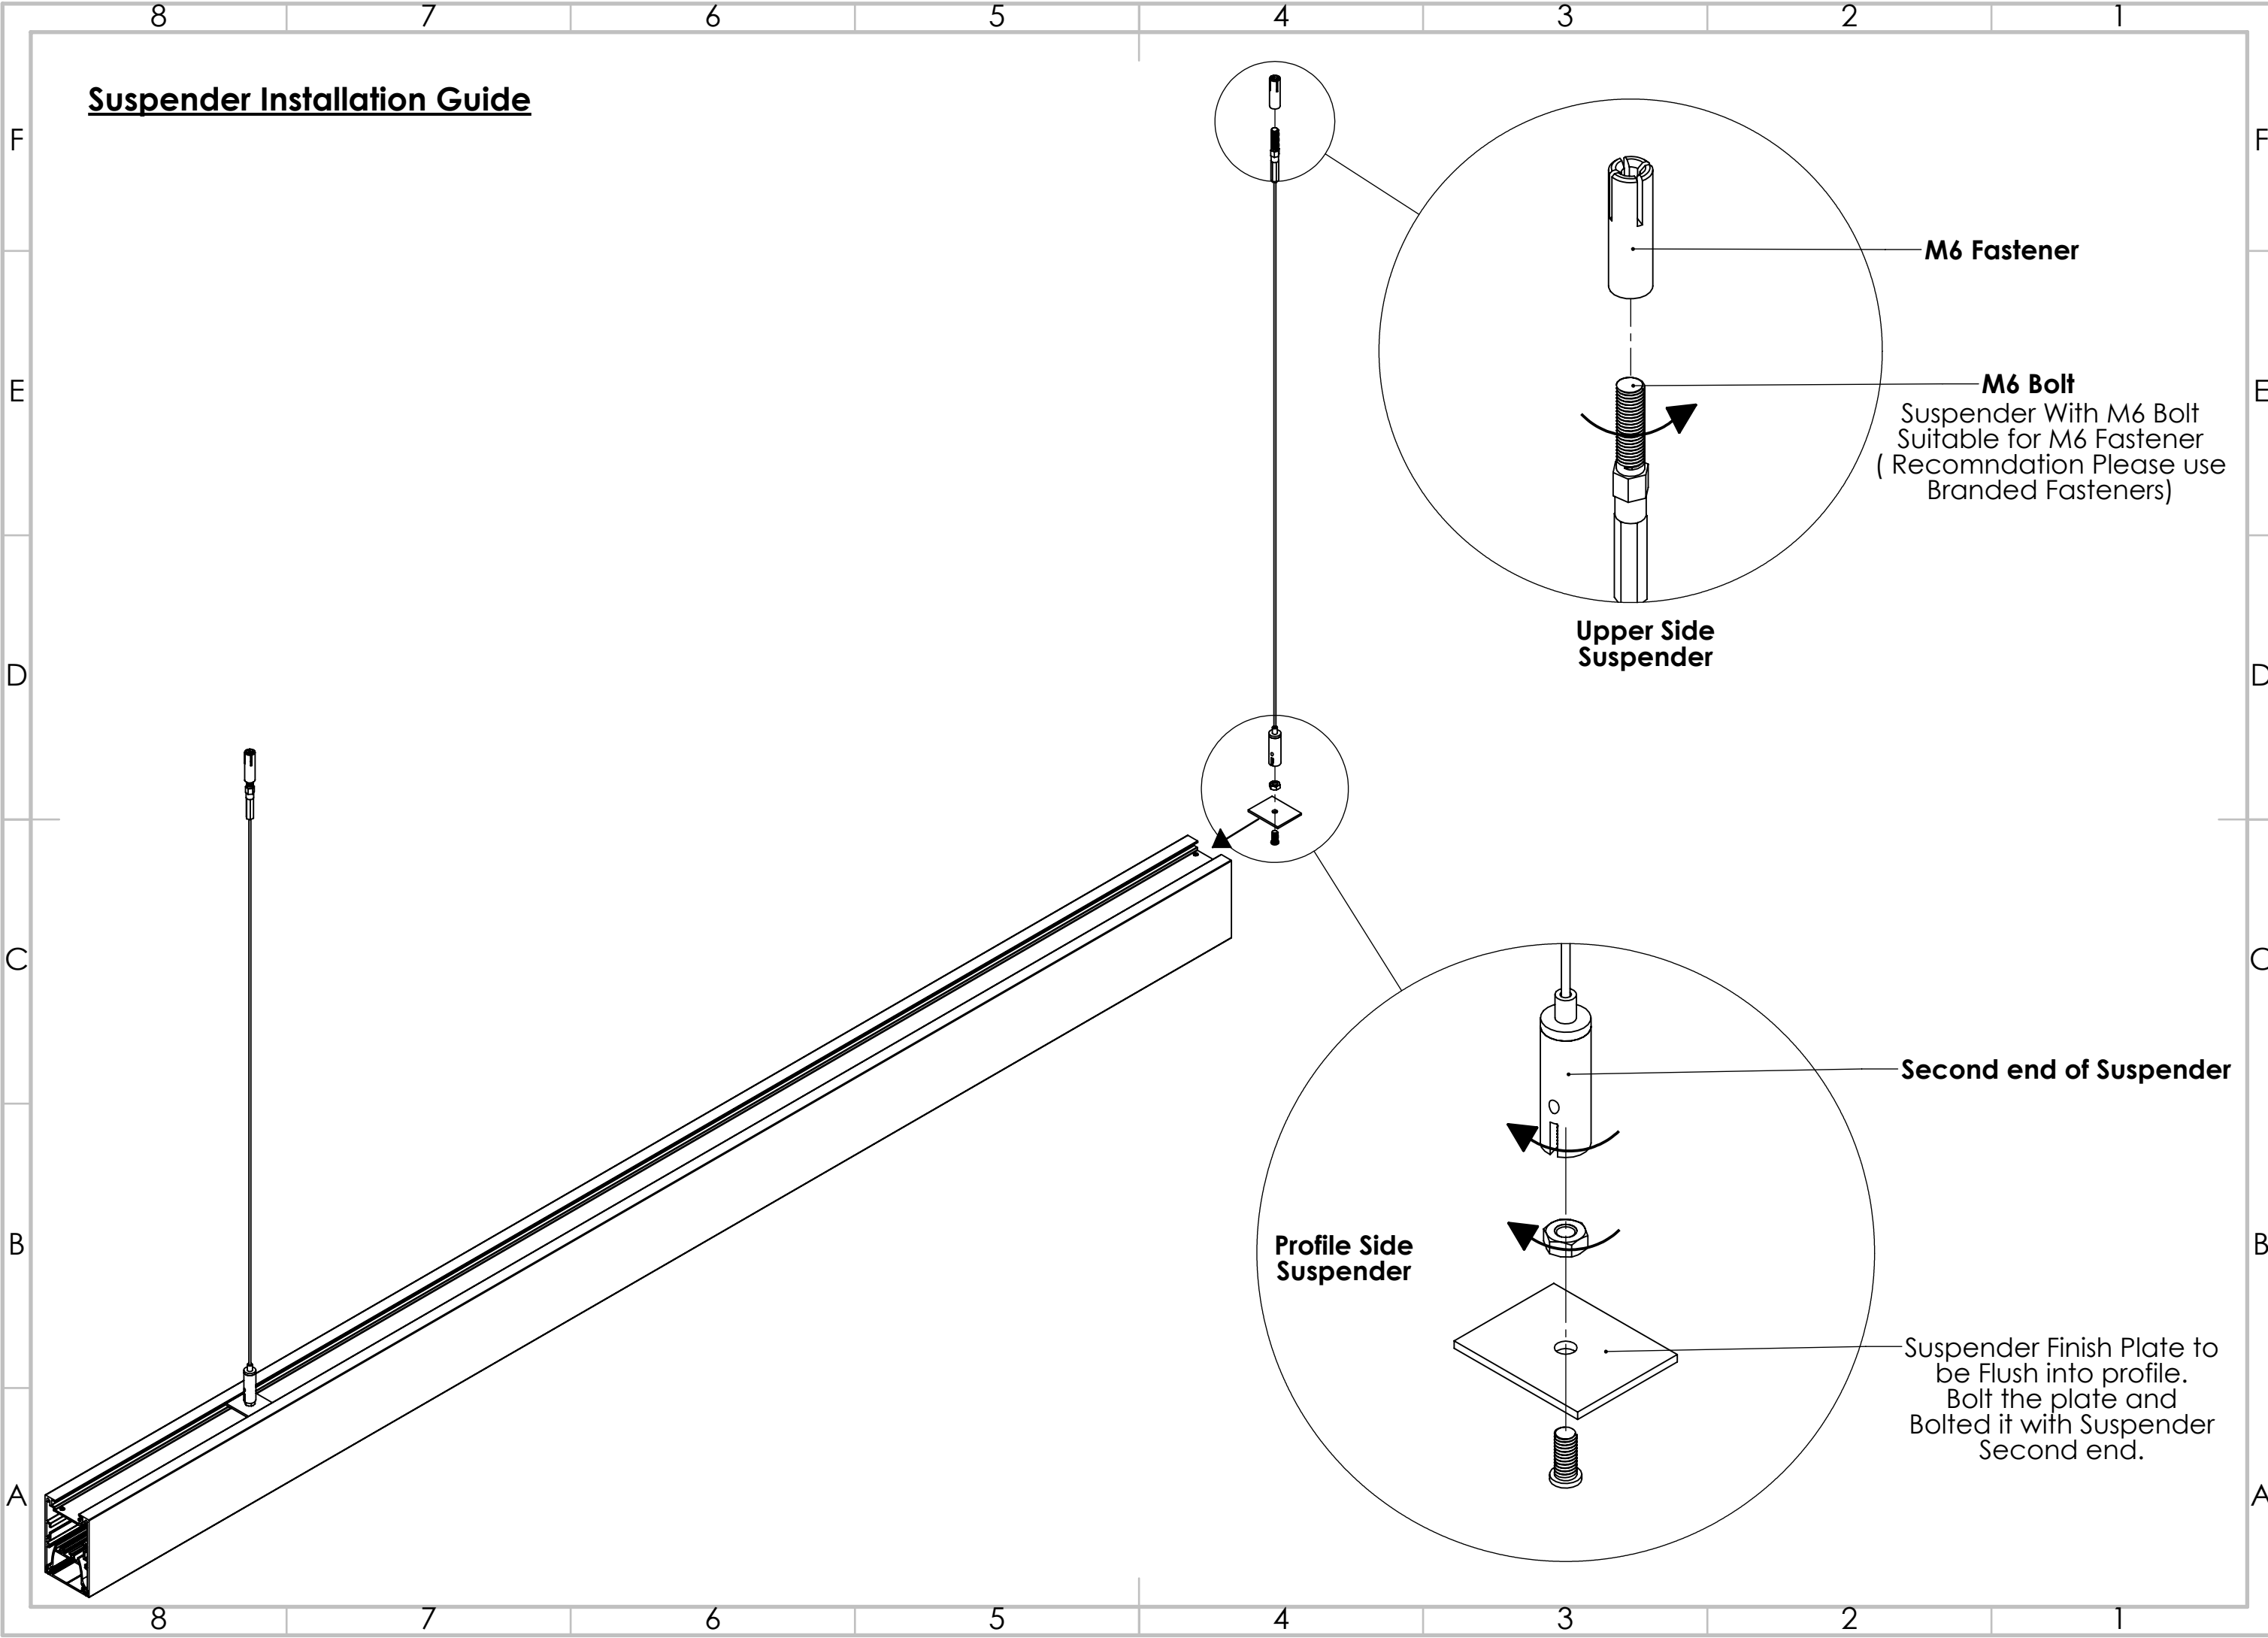

Suspender Installation Guide

M6 Fastener

M6 Bolt

Suspender With M6 Bolt
Suitable for M6 Fastener
(Recommendation Please use
Branded Fasteners)

**Upper Side
Suspender**

Second end of Suspender

**Profile Side
Suspender**

Suspender Finish Plate to
be Flush into profile.
Bolt the plate and
Bolted it with Suspender
Second end.