


**Recomndation :-**

- 1) Each Standation Profile upto 2400mm Single Piece Shoud be with two Suspension.
- 2) Joining of Profile upto 2400mm and less should have suspender at the ends and Suspenders at the either side of the Joint.

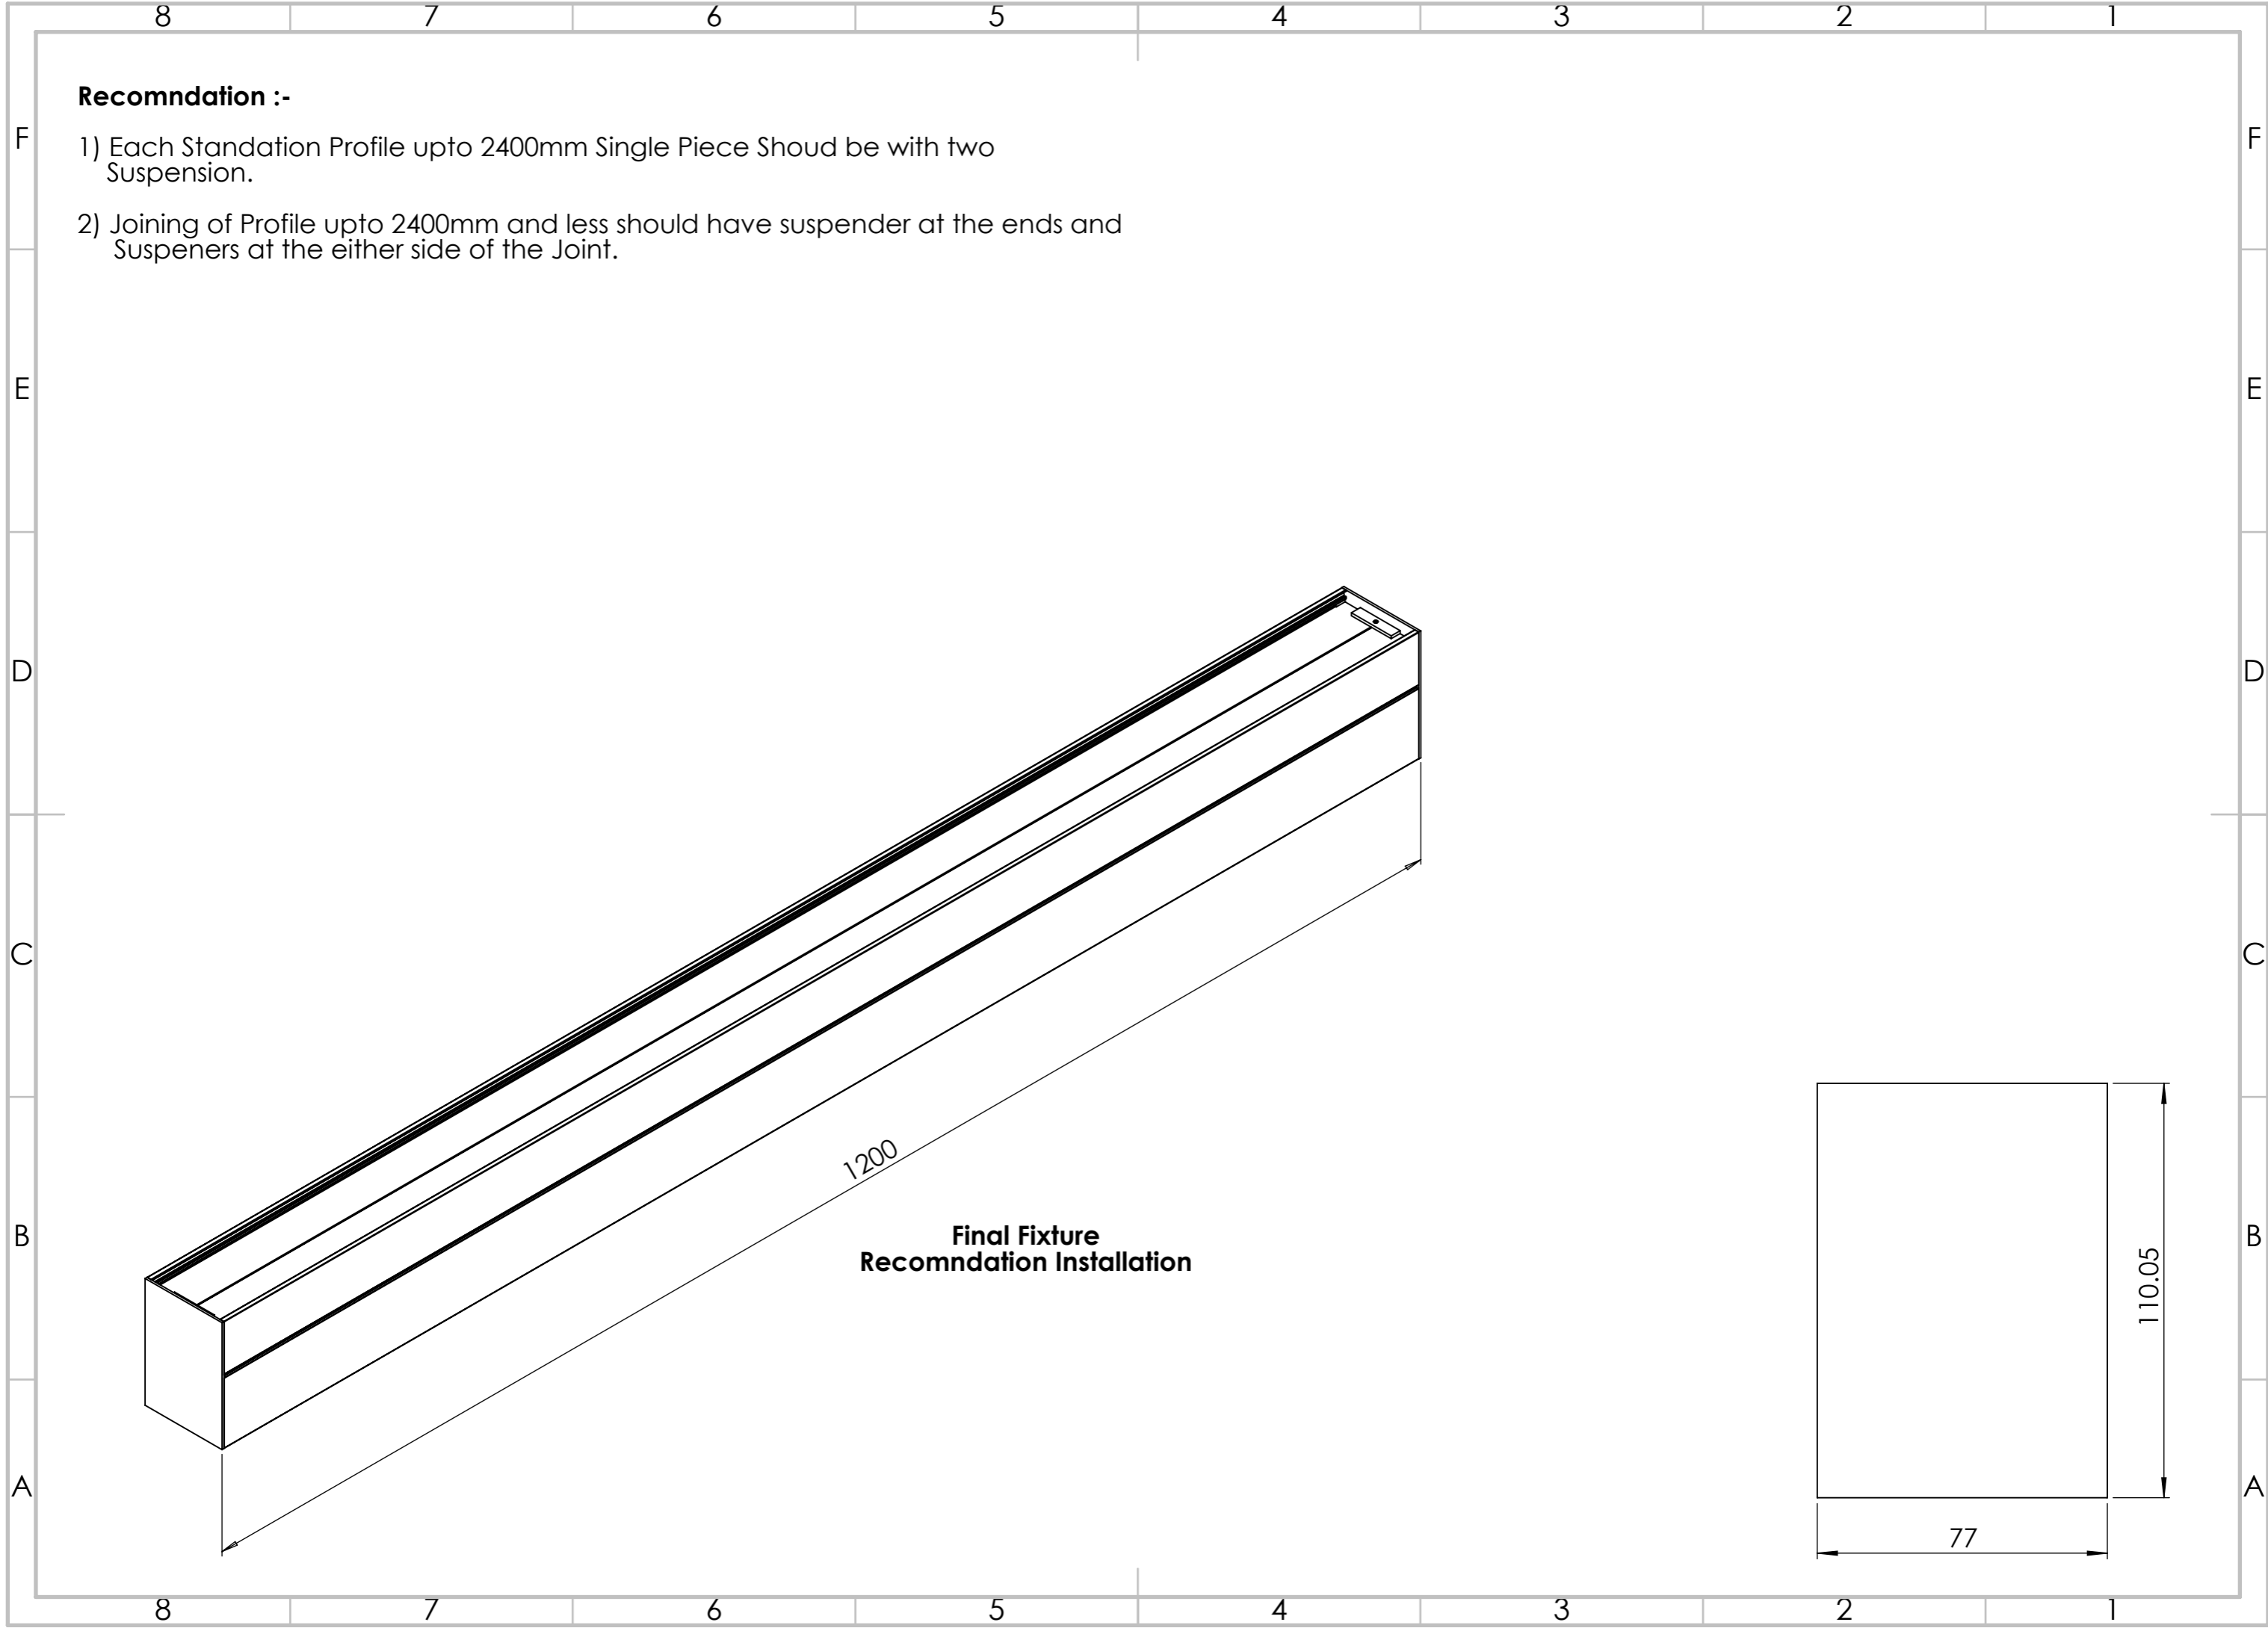

**Final Fixture  
Recomndation Installation**

**Assembly of Complete Part into a Luminaire.**

**Finished Profile in Bottom Opening :-**

1. Remove End Cap Grab Screw
2. Remove End Cap
3. Remove Insert

**Our Product Comes in Assembled Format side.  
This is Just an Pictovial Presentantion of our Profile Assembly.**

**End Cap**  
(Screwing Of end Cap in Required)

Grab Screw

Wire

**Driver**  
( Cabling Part in without )

End Cap

Outer Profile

Insert

Lens with PCB


**Disintegration of Luminaire into part for Maintance of Drive & LED :-**

**1. Drive:-**


- End Cap Grab screw Remove
- End Cap Remove
- Insert Removal From Below
- Acces Driver
- Remove Wire Connection
- Unscrew Driver
- Put New Driver
- Screw New Driver
- Wire Connection Indriver
- Put Insert Back Into Outer Profile
- Finished Cap

**2. LED:-**


- End Cap Grab screw Remove
- End Cap Remove
- Insert Removal From Below
- Remove Connect Wire From Wago connector
- Unscrew Lens With PCB
- Remove PCB
- Add New PCB with heat tap on back side
- Connection Again
- Put Lens With PCB Back
- Put Insert into Outer Profile
- Fix End Cap

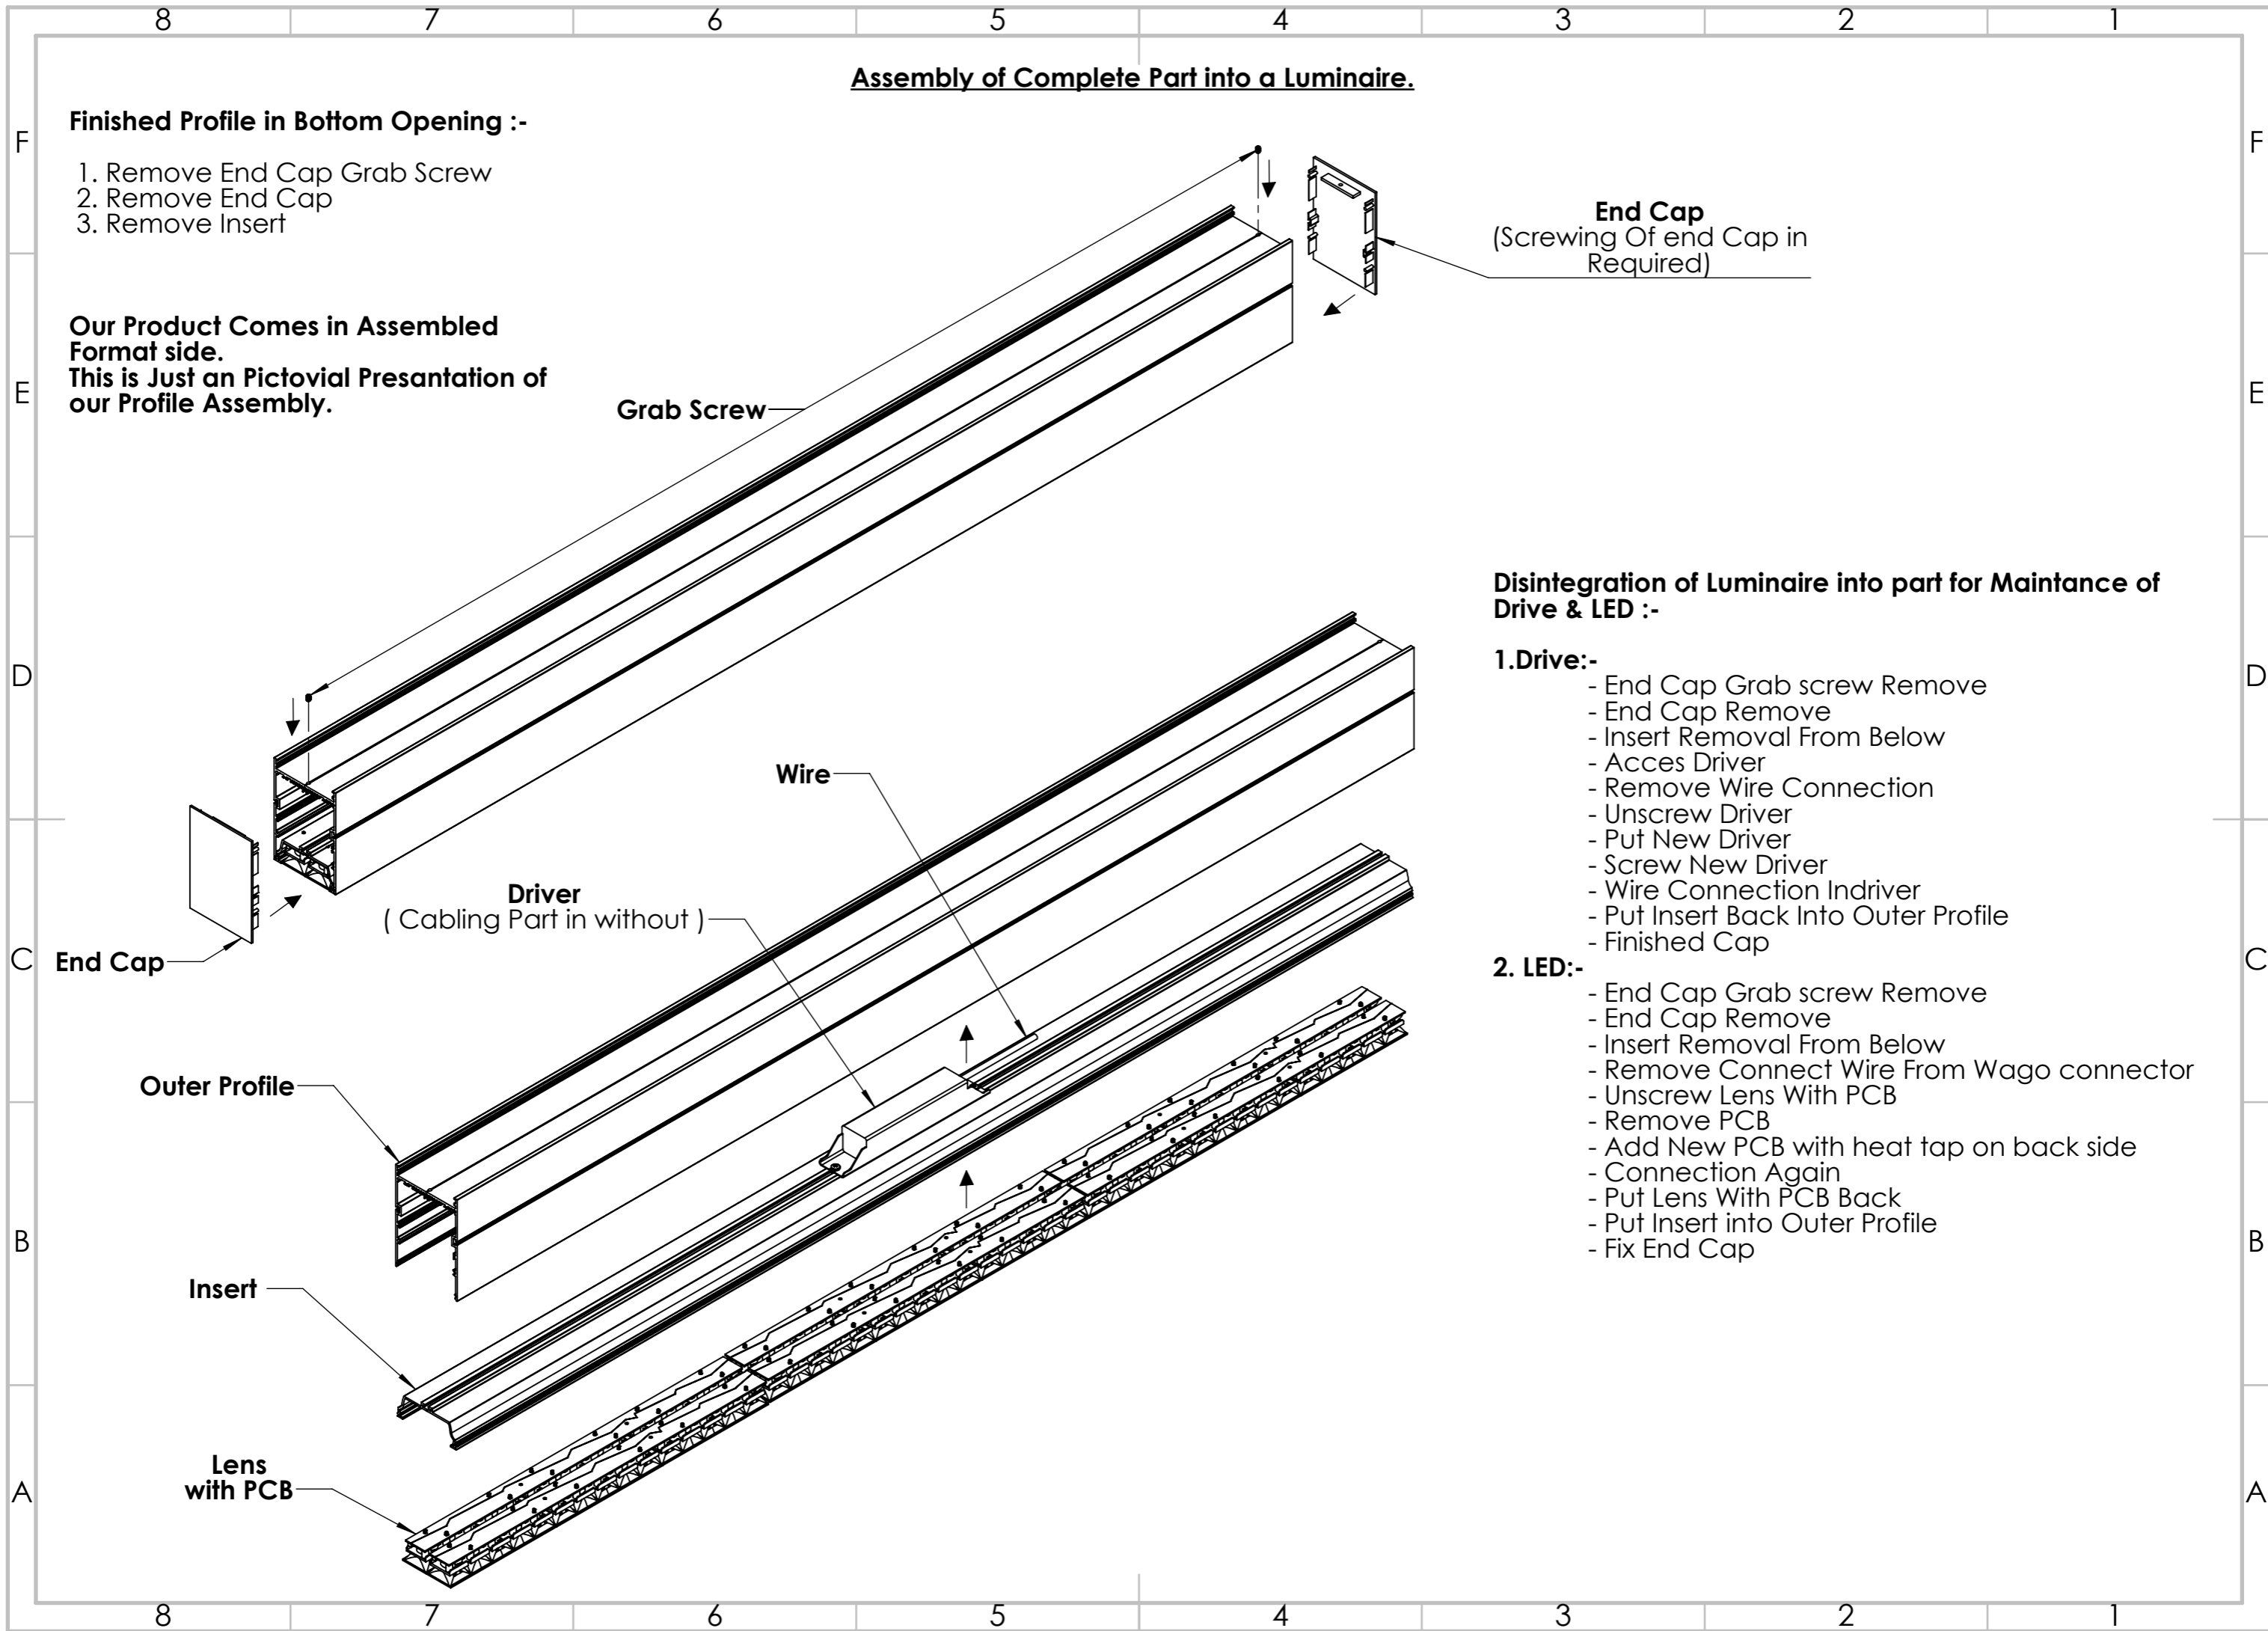


**Profile Explode View**

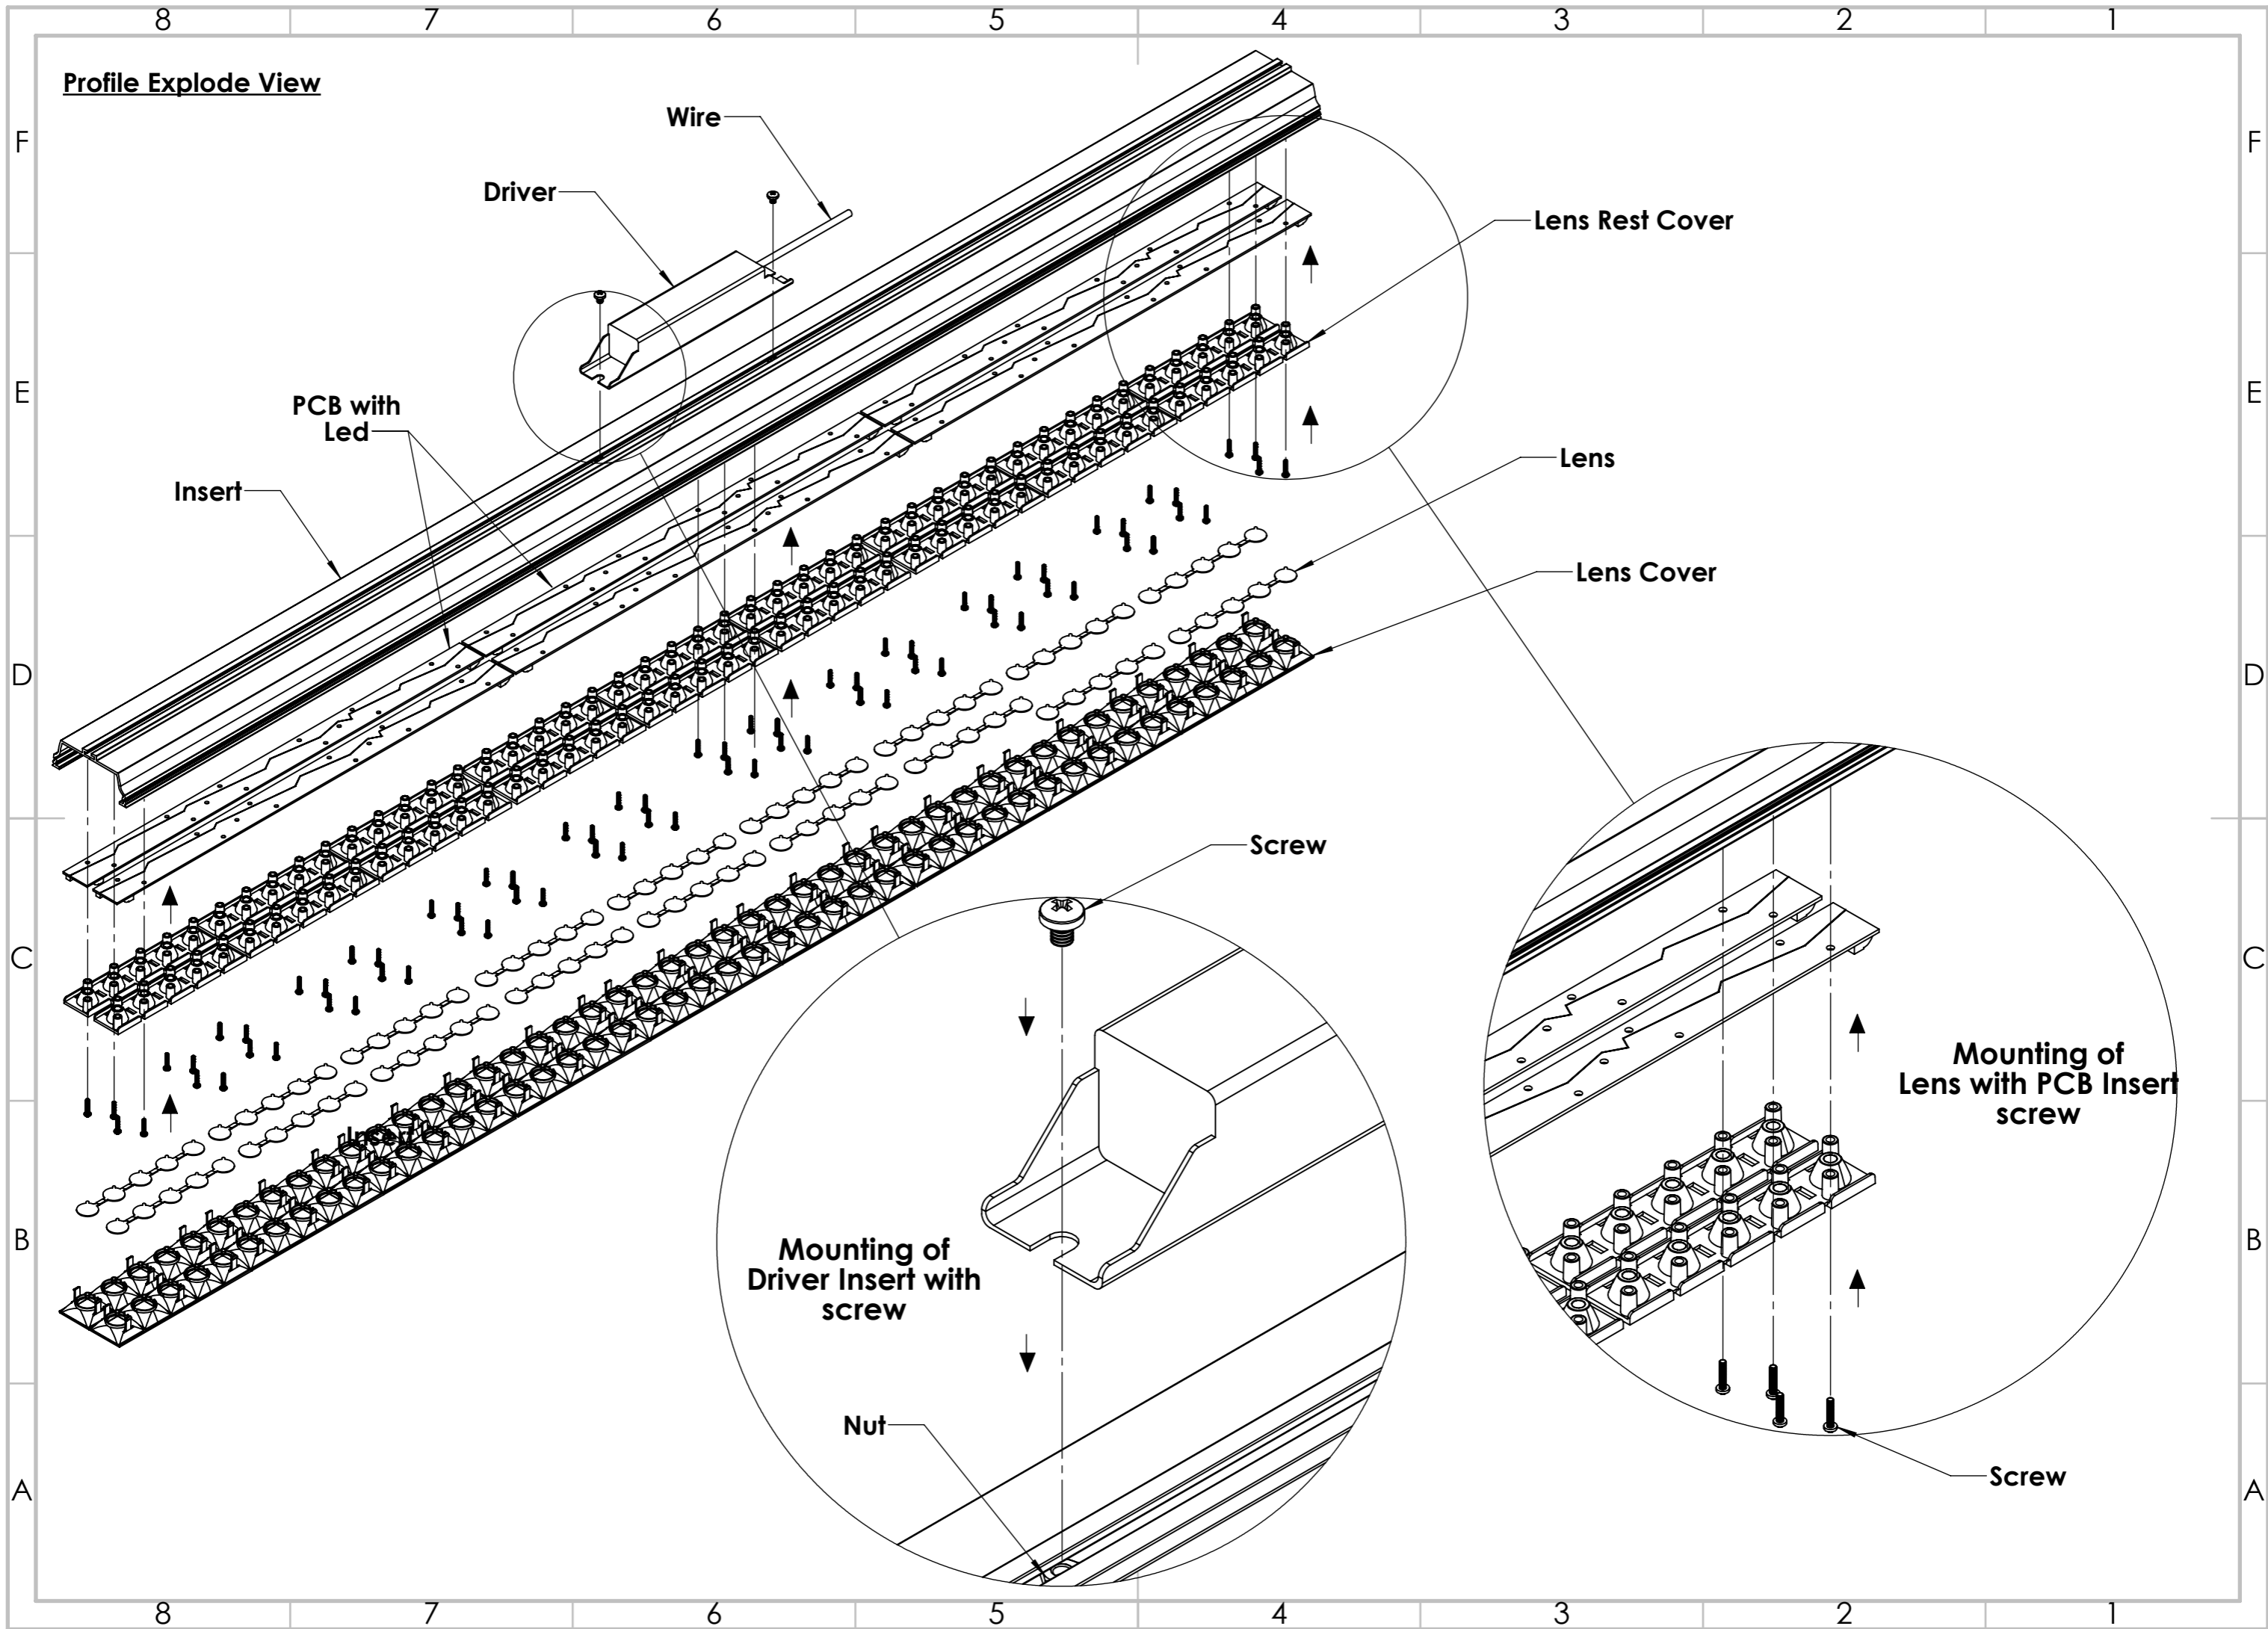

**Profile Connector Installation Guide :-**

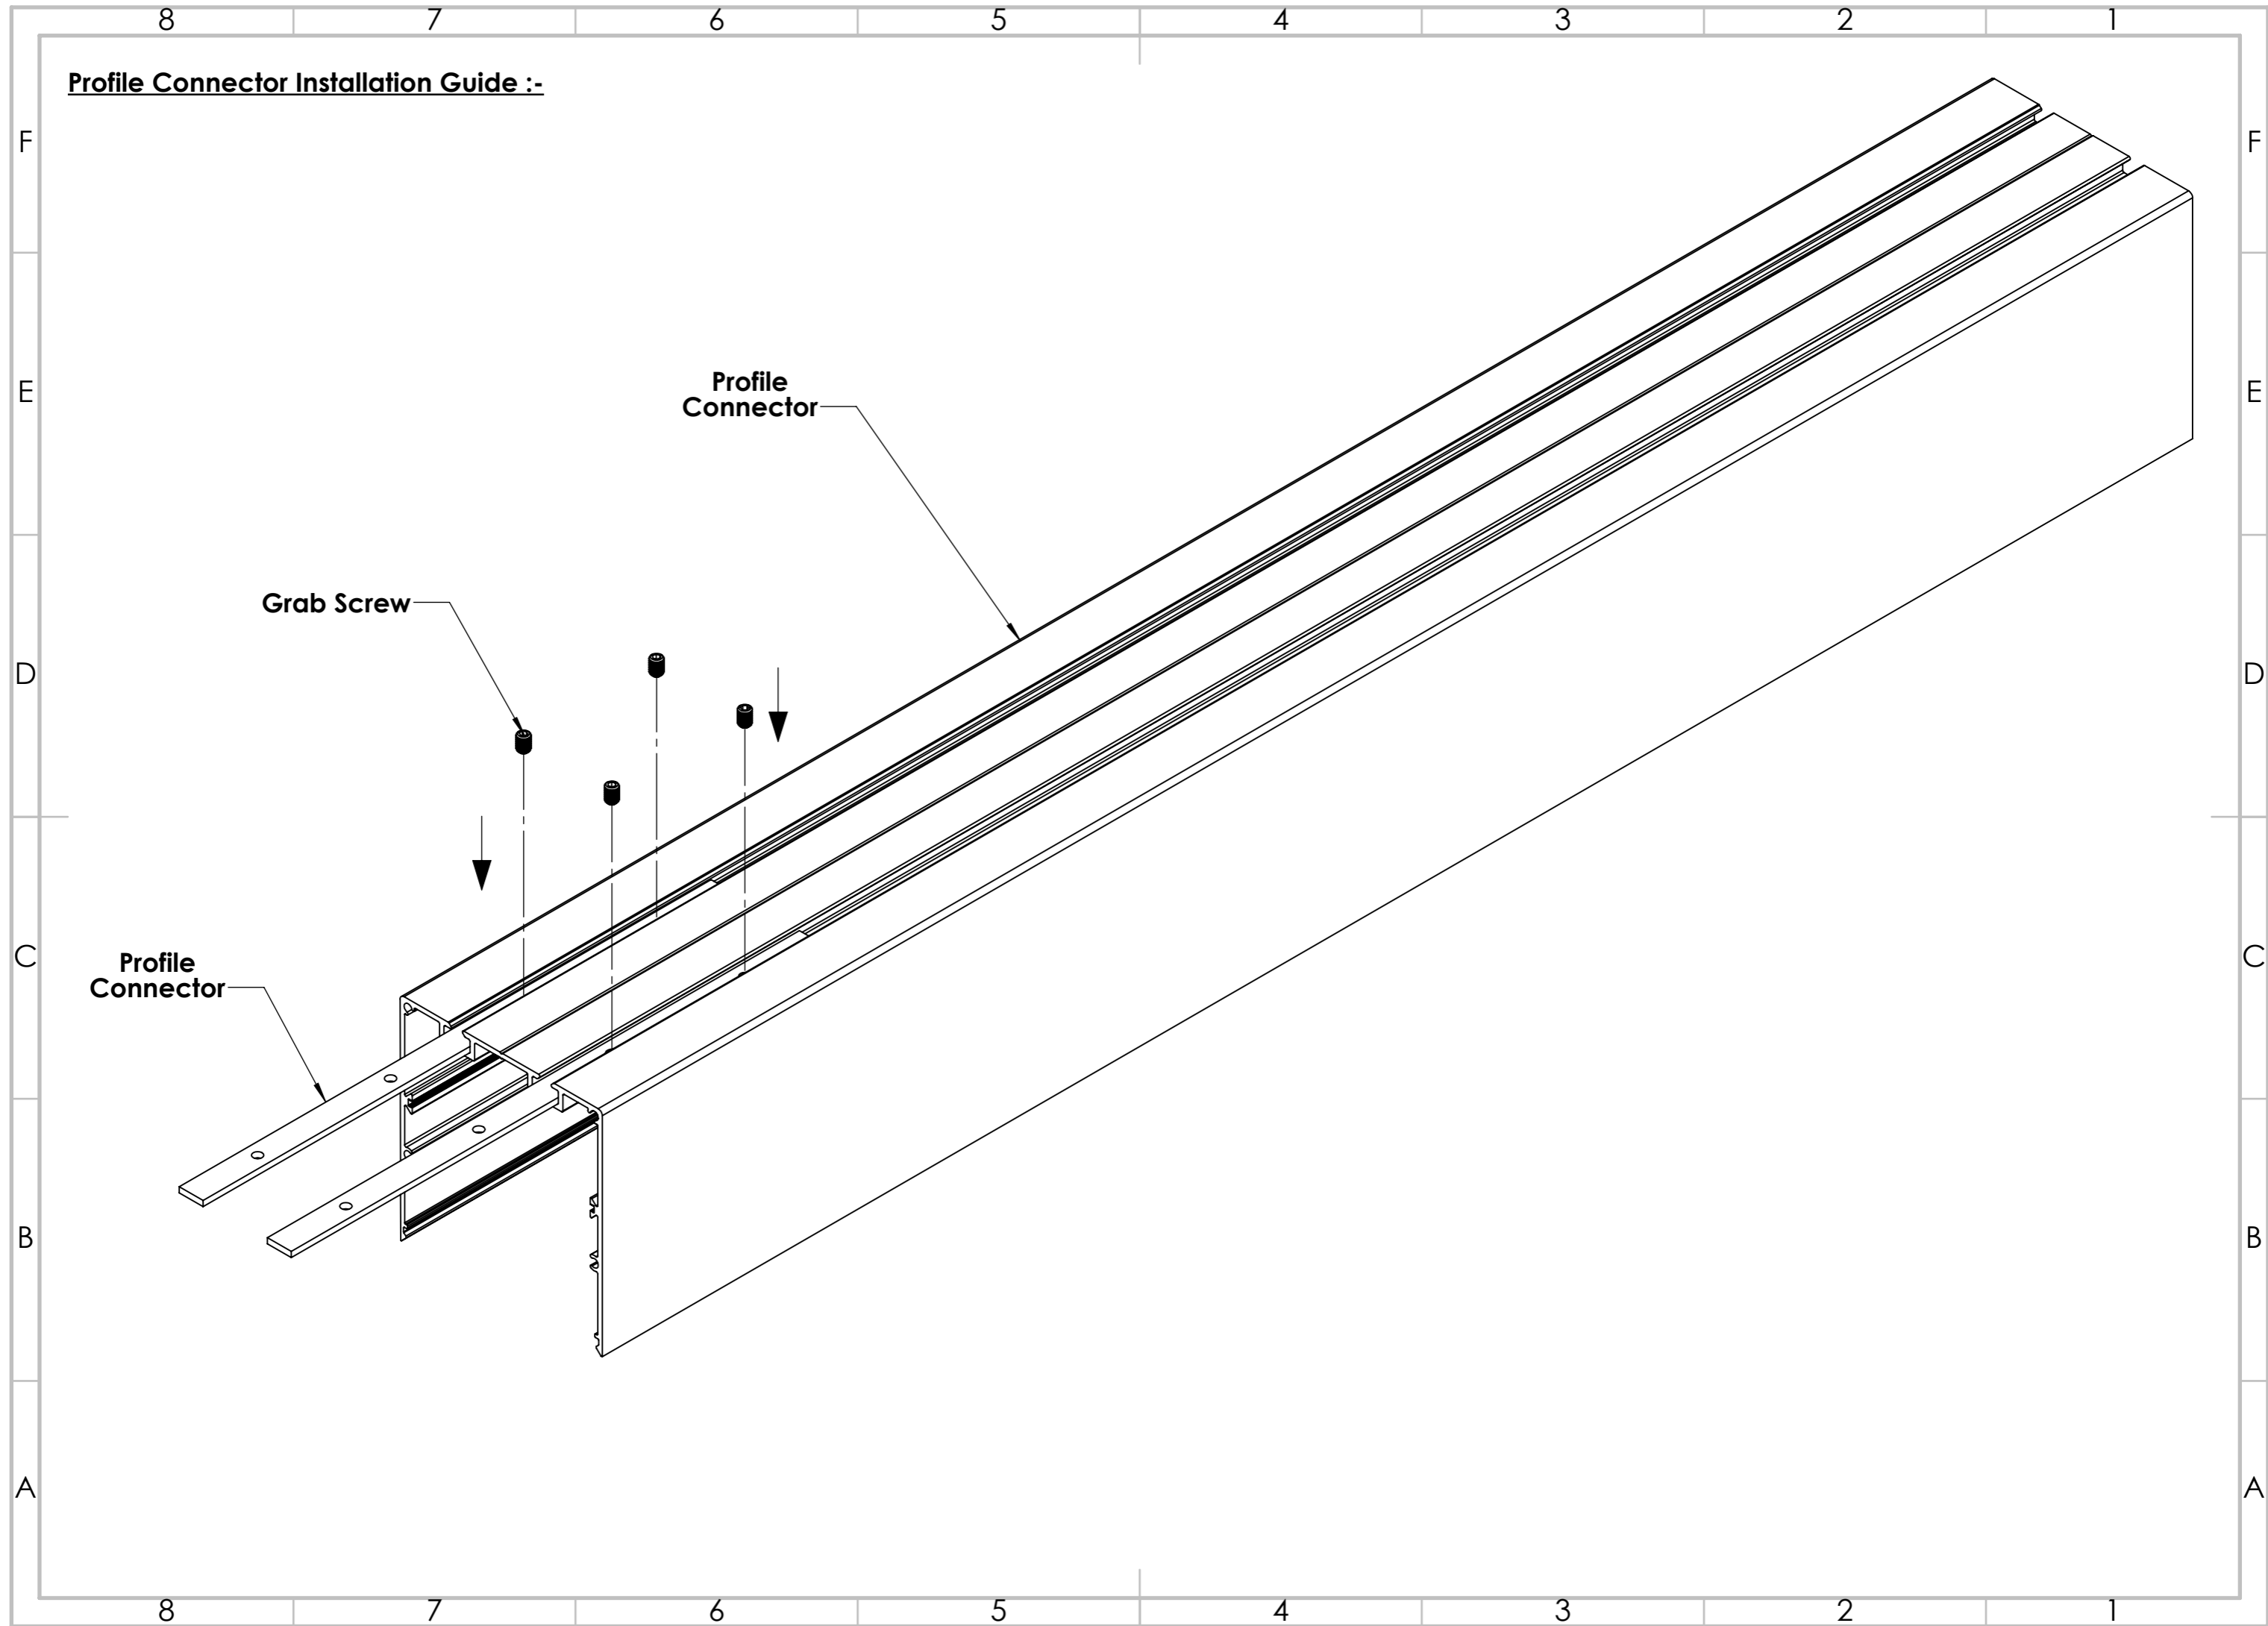


**Surface Profile Installation Guide**

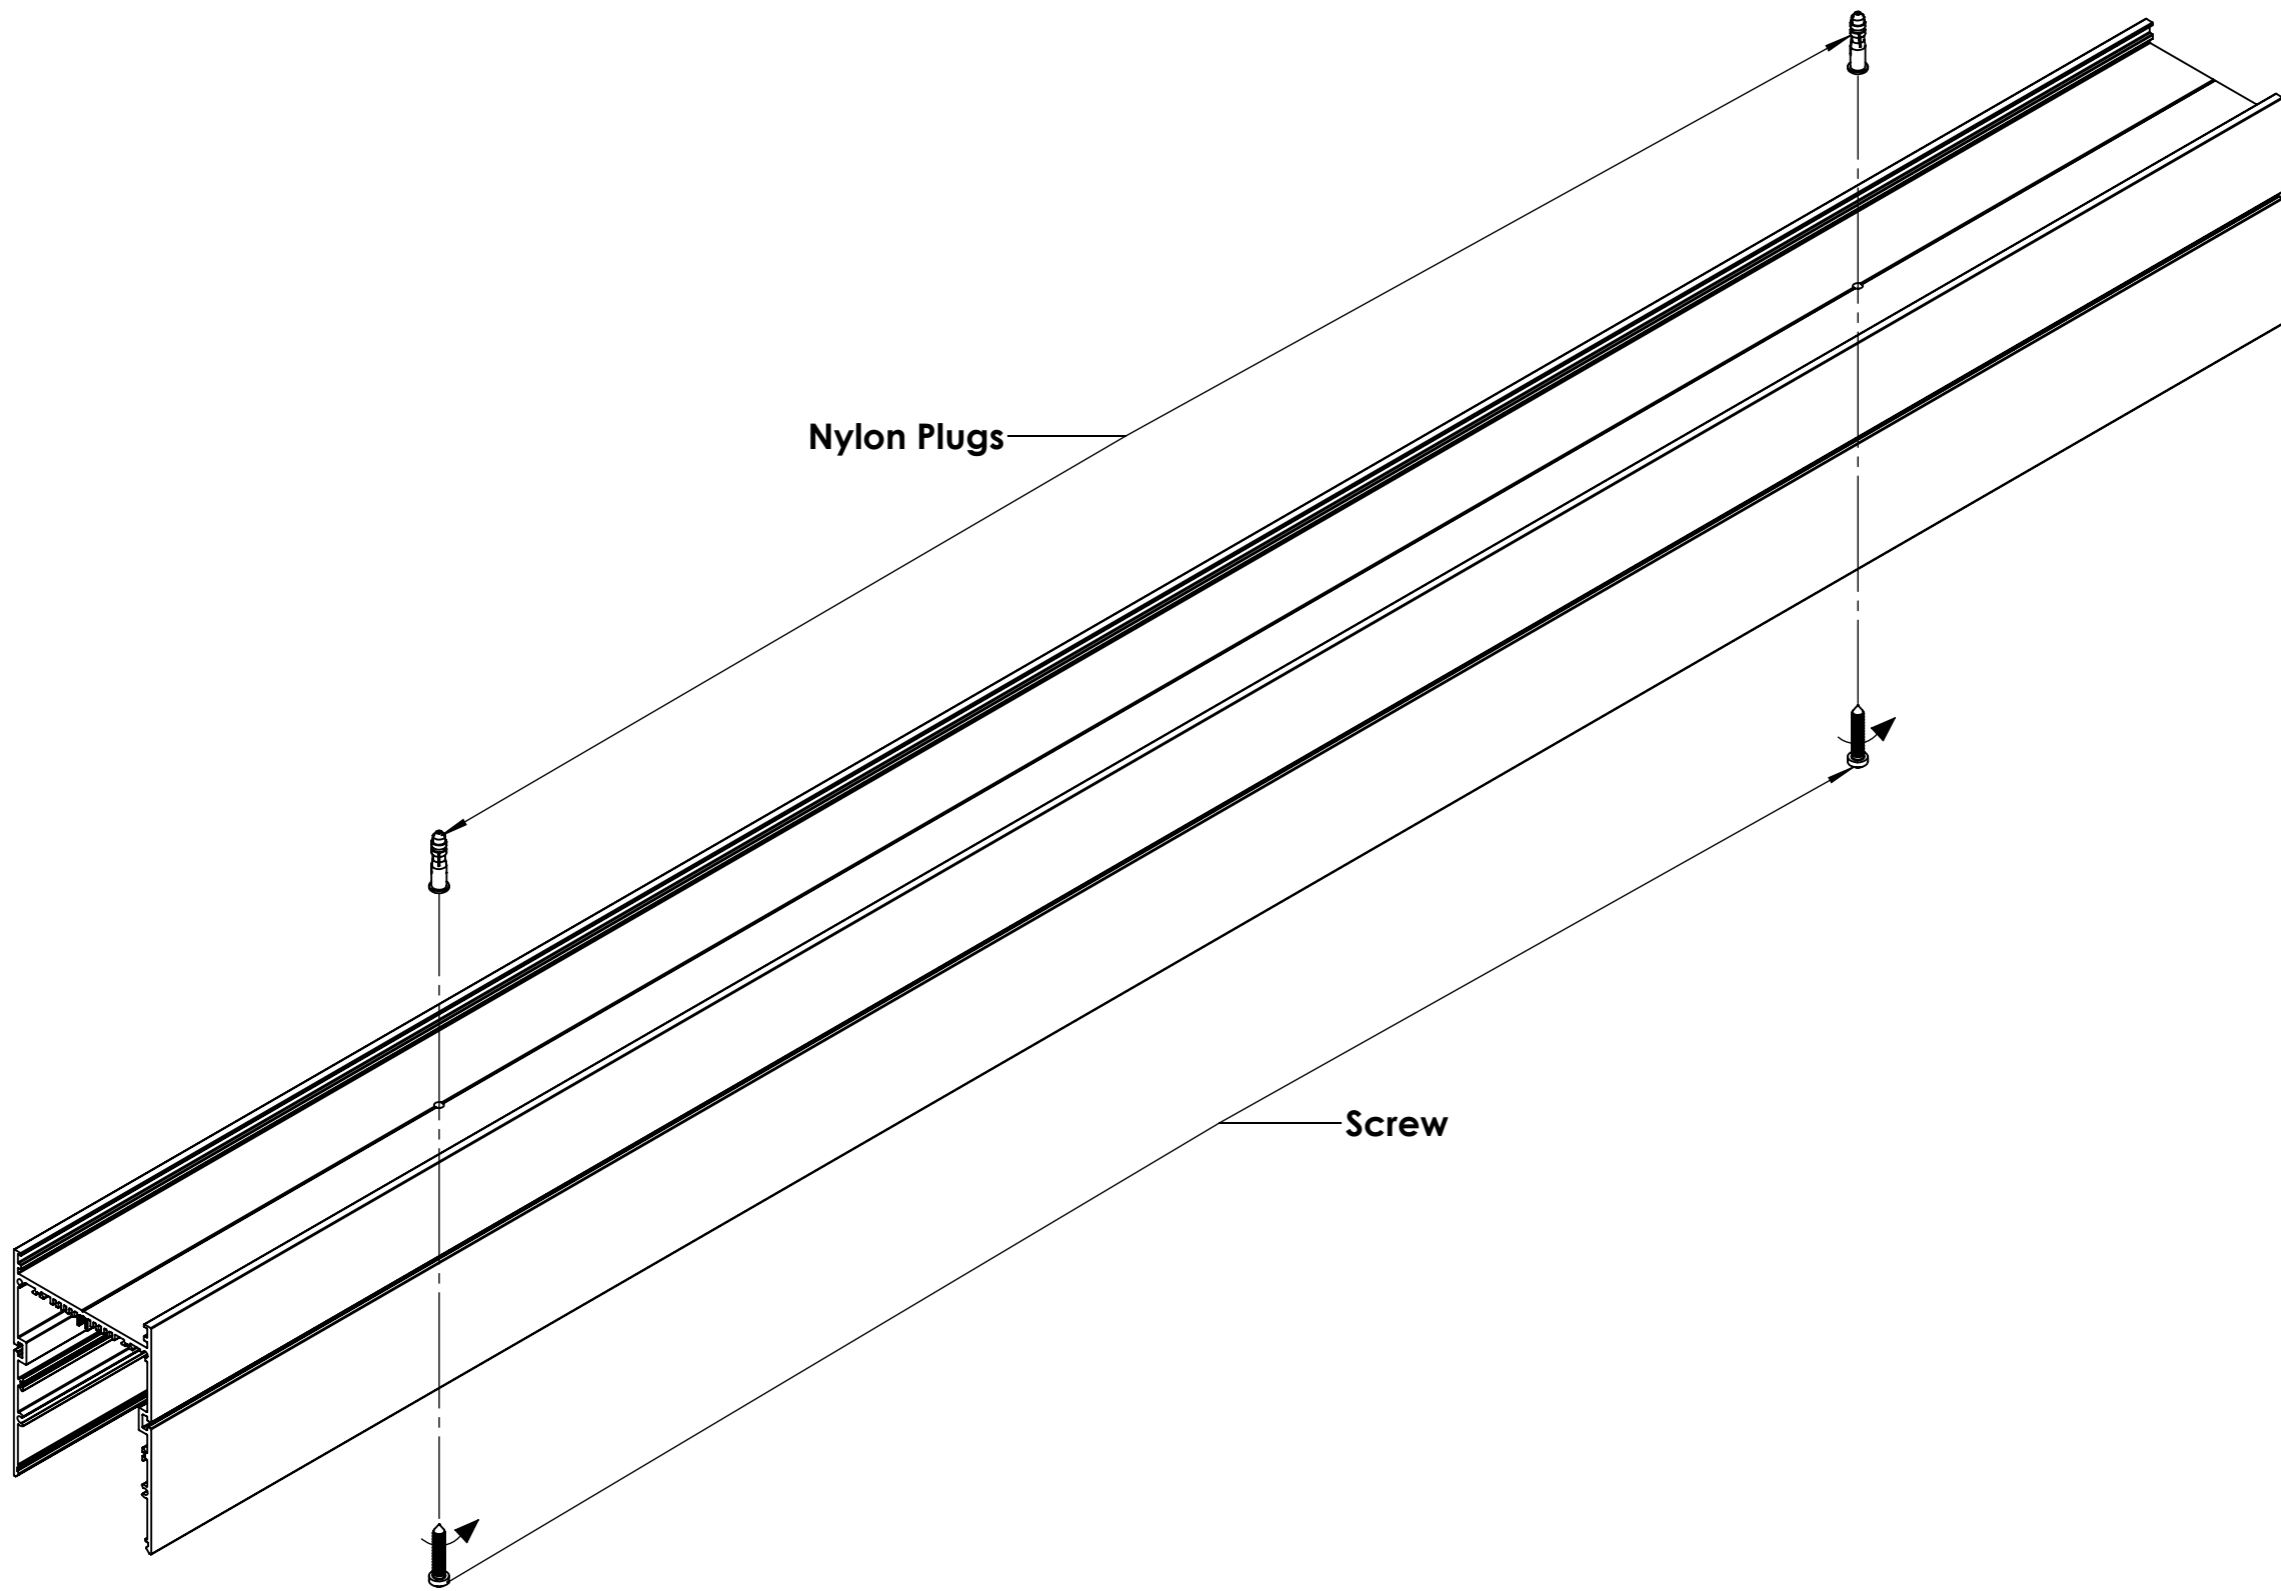

**Nylon Plugs**

**Screw**

**Surface Profile Installation Guide**

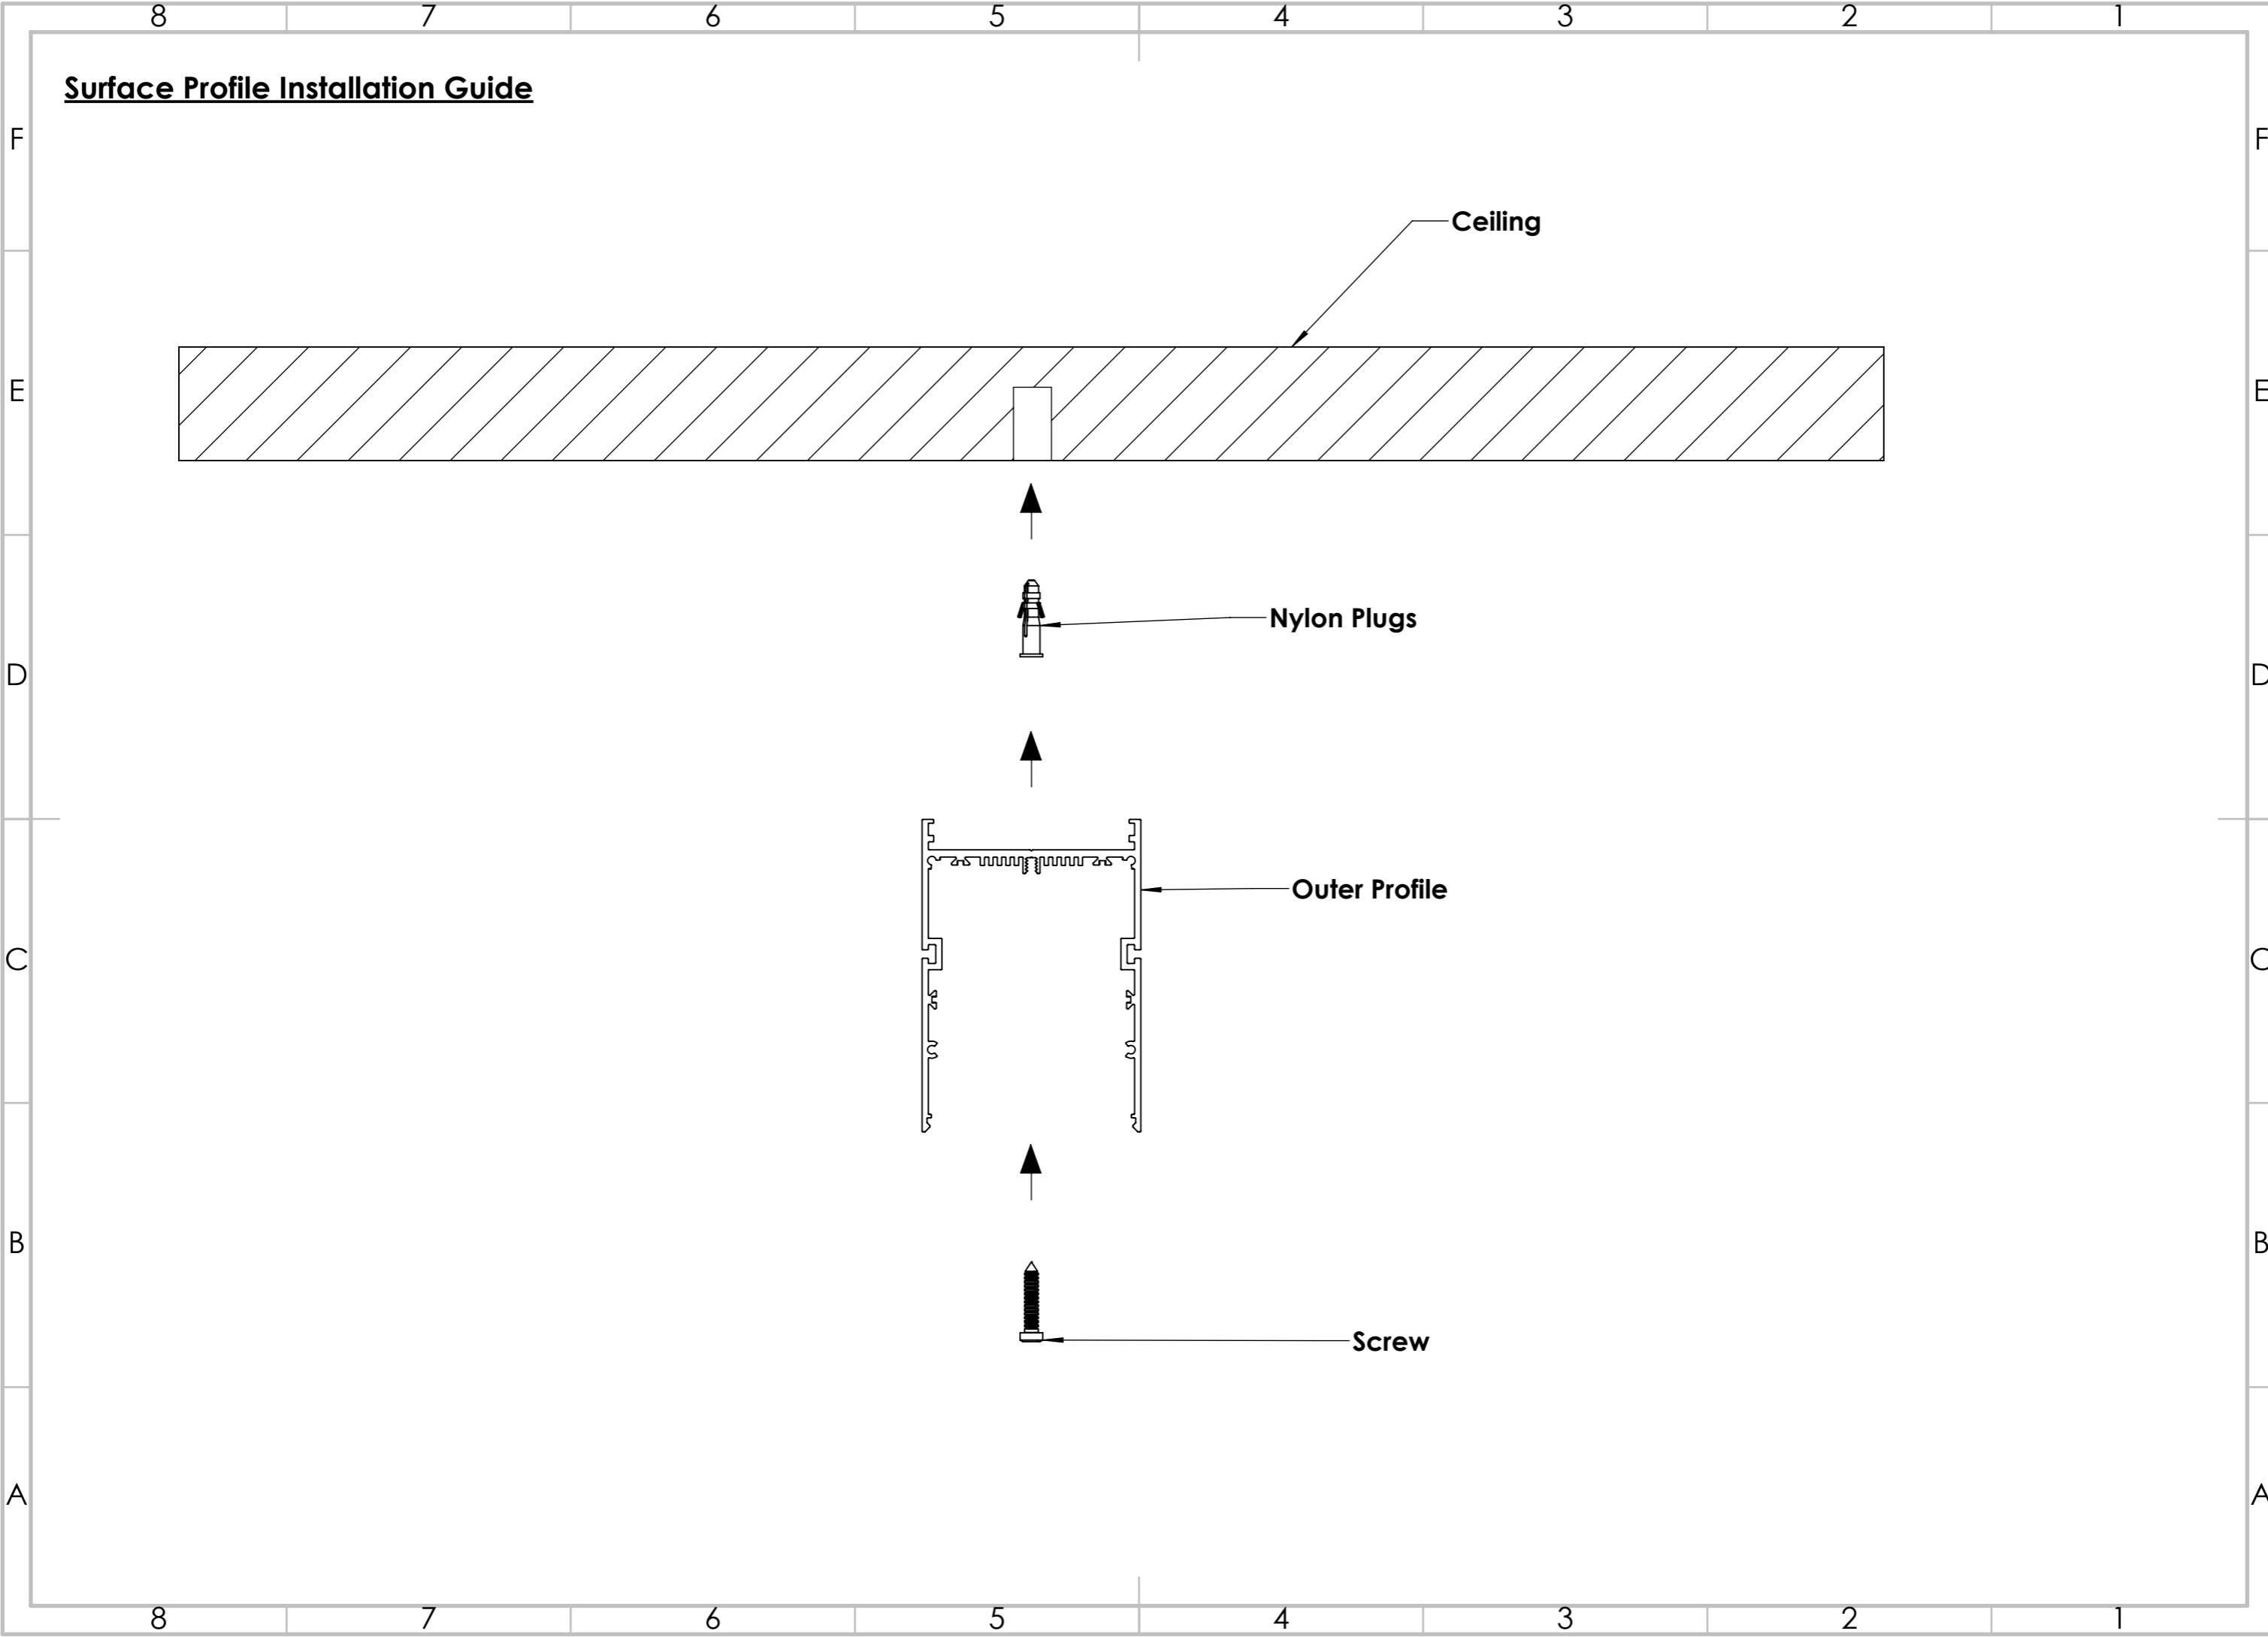

**Surface Profile Installation Guide**

